

TRIANGOLA ALU K.D LOUVERS PERGOLA


ASSEMBLY INSTRUCTIONS

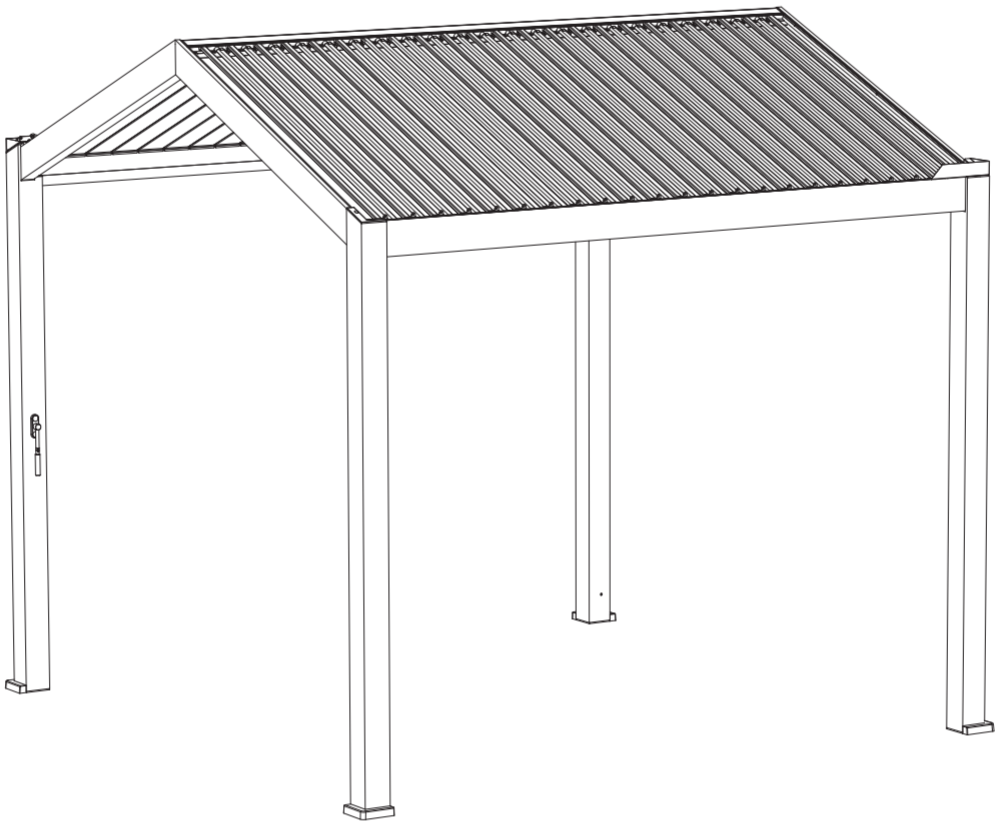


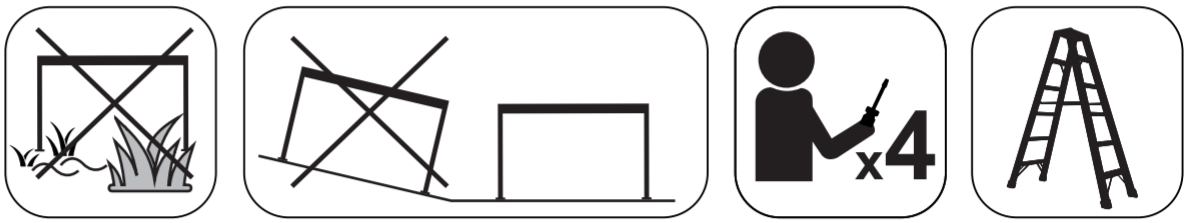

READ & SAVE BELOW INSTRUCTIONS BEFORE ASSEMBLY


1. PLEASE SEPARATE AND IDENTIFY ALL PARTS,MAKING SURE THAT YOU HAVE ALL OF THE PARTS LISTED.
2. TO AVOID ANY SCRATCH DURING ASSEMBLY, PLEASE ASSEMBLE ON A SOFT MAT OR SIMILAR.
3. PLEASE ASSEMBLE STEP BY STEP AND FOLLOW THE INSTRUCTIONS.
4. WASHERS MUST BE USED.
5. WHILE EACH SCREW AND NUT IS PROPERLY FASTENED, DO NOT OVER FASTEN IT.
6. DO NOT COMPLETELY FASTEN EACH SCREW AND NUT UNTIL ALL THE SCREWS ARE PROPERLY FIXED.

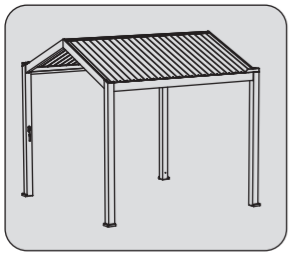

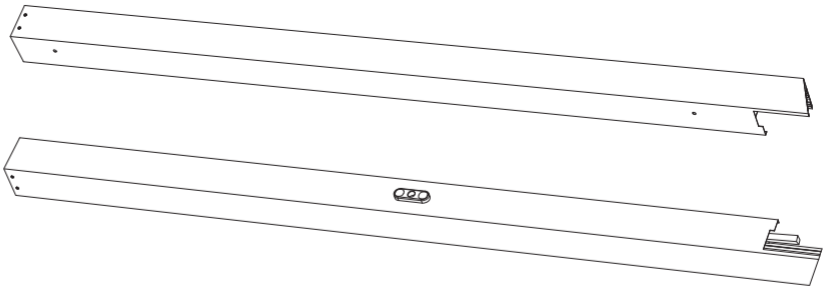


① x2

② x2

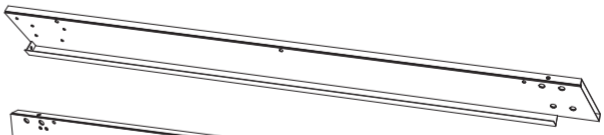

③ x2

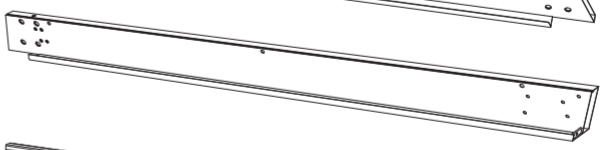

④ x2



⑤ x44




⑥ x2



⑦ x2



⑧ x1

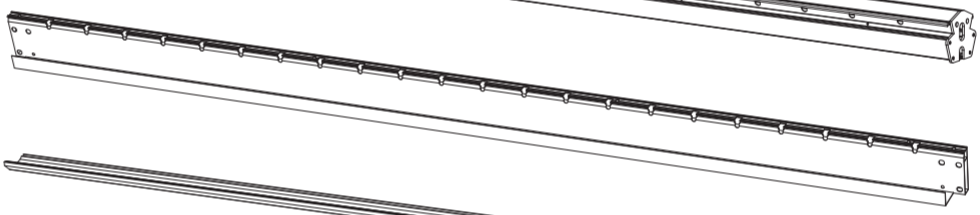

⑨ x2




⑩ x2




⑪ x2




⑫ x2



⑬ x4




⑭ x4

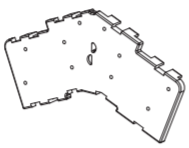


⑮ x2



⑯ x16



⑰ x44




⑱ x2




⑲ x1




⑳ x2




㉑ x2




㉒ x2




㉓ x2




㉔ x2

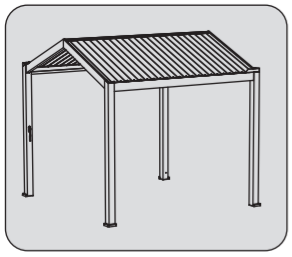




M6X15

Ax58



M8X15

Bx28



M6X15

Cx8




Ø6.5mm/12mm

Dx12



Ex12



Fx46




M6

Gx8




M6

Hx6




M6X15

Ix4



M6X40

Jx4




M6X25


Kx12



Lx12

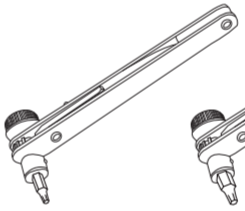

Mx1

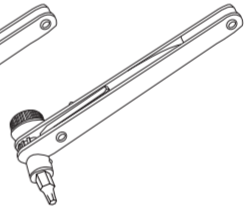


M1x1




Nx12



Ox12

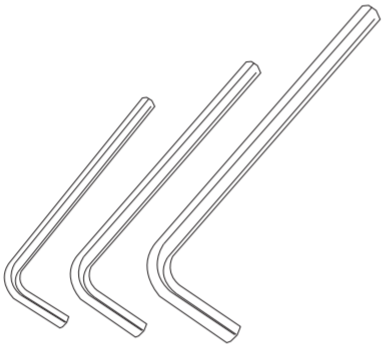

Px1

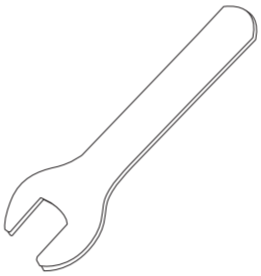


Qx1




Rx1


Install all the relevant screws,but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

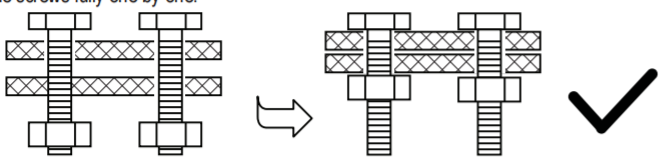


Don't tighten up the screw before you start next mounting during the installation.

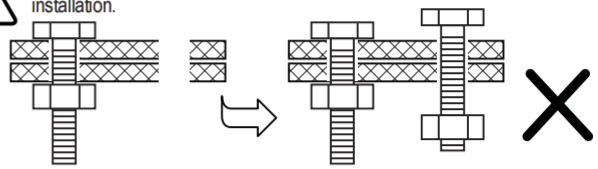


Install all the relevant screws,but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

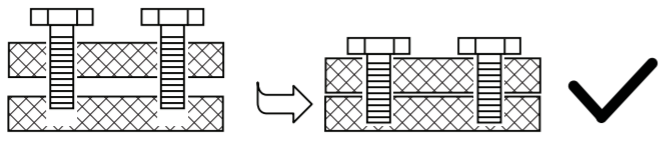


Don't tighten up the screw before you start next mounting during the installation.

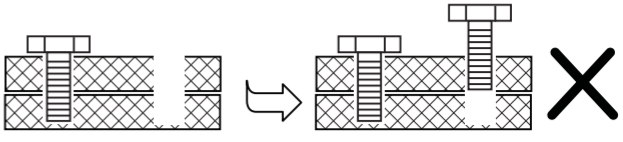


1

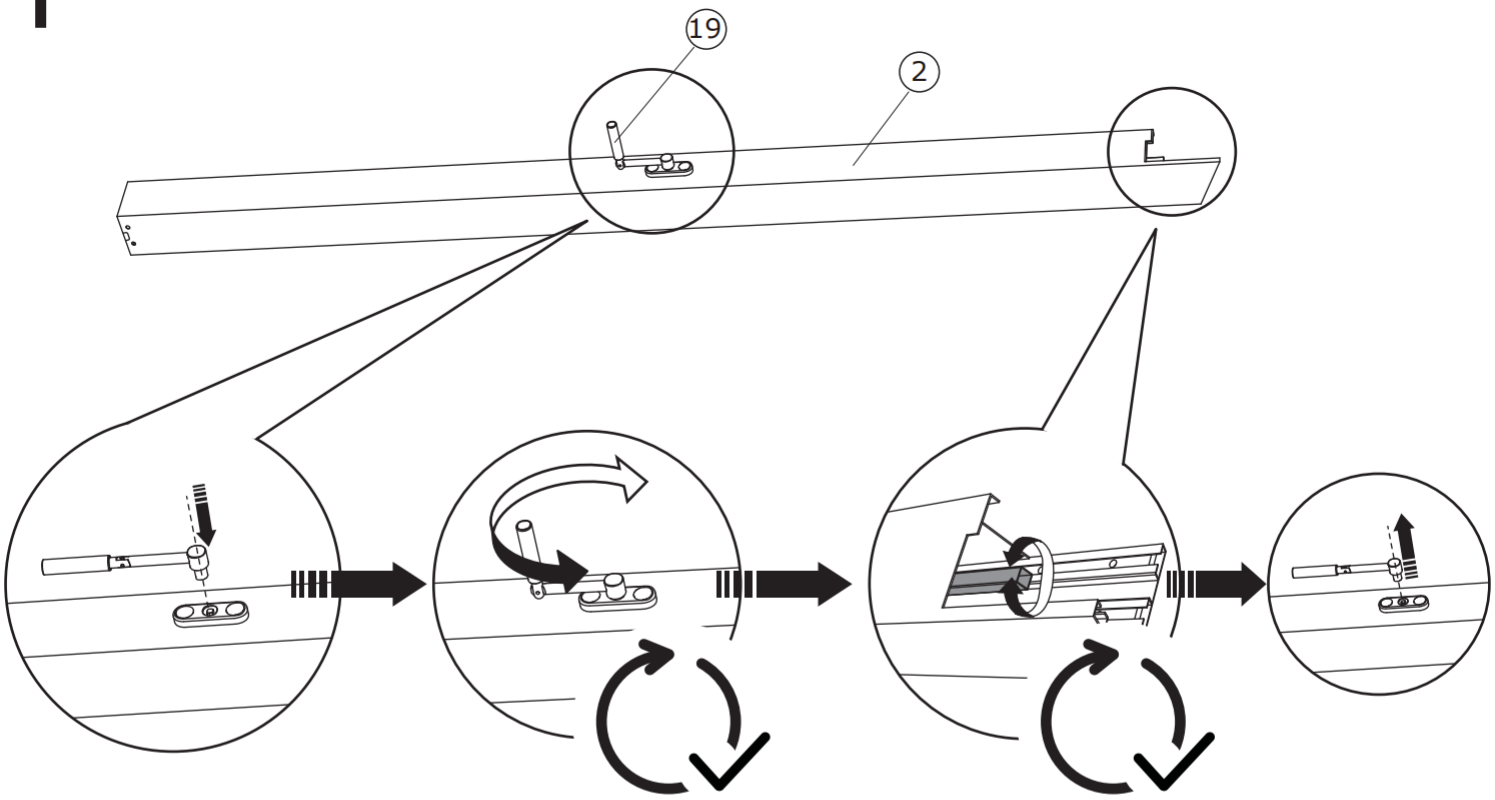


2

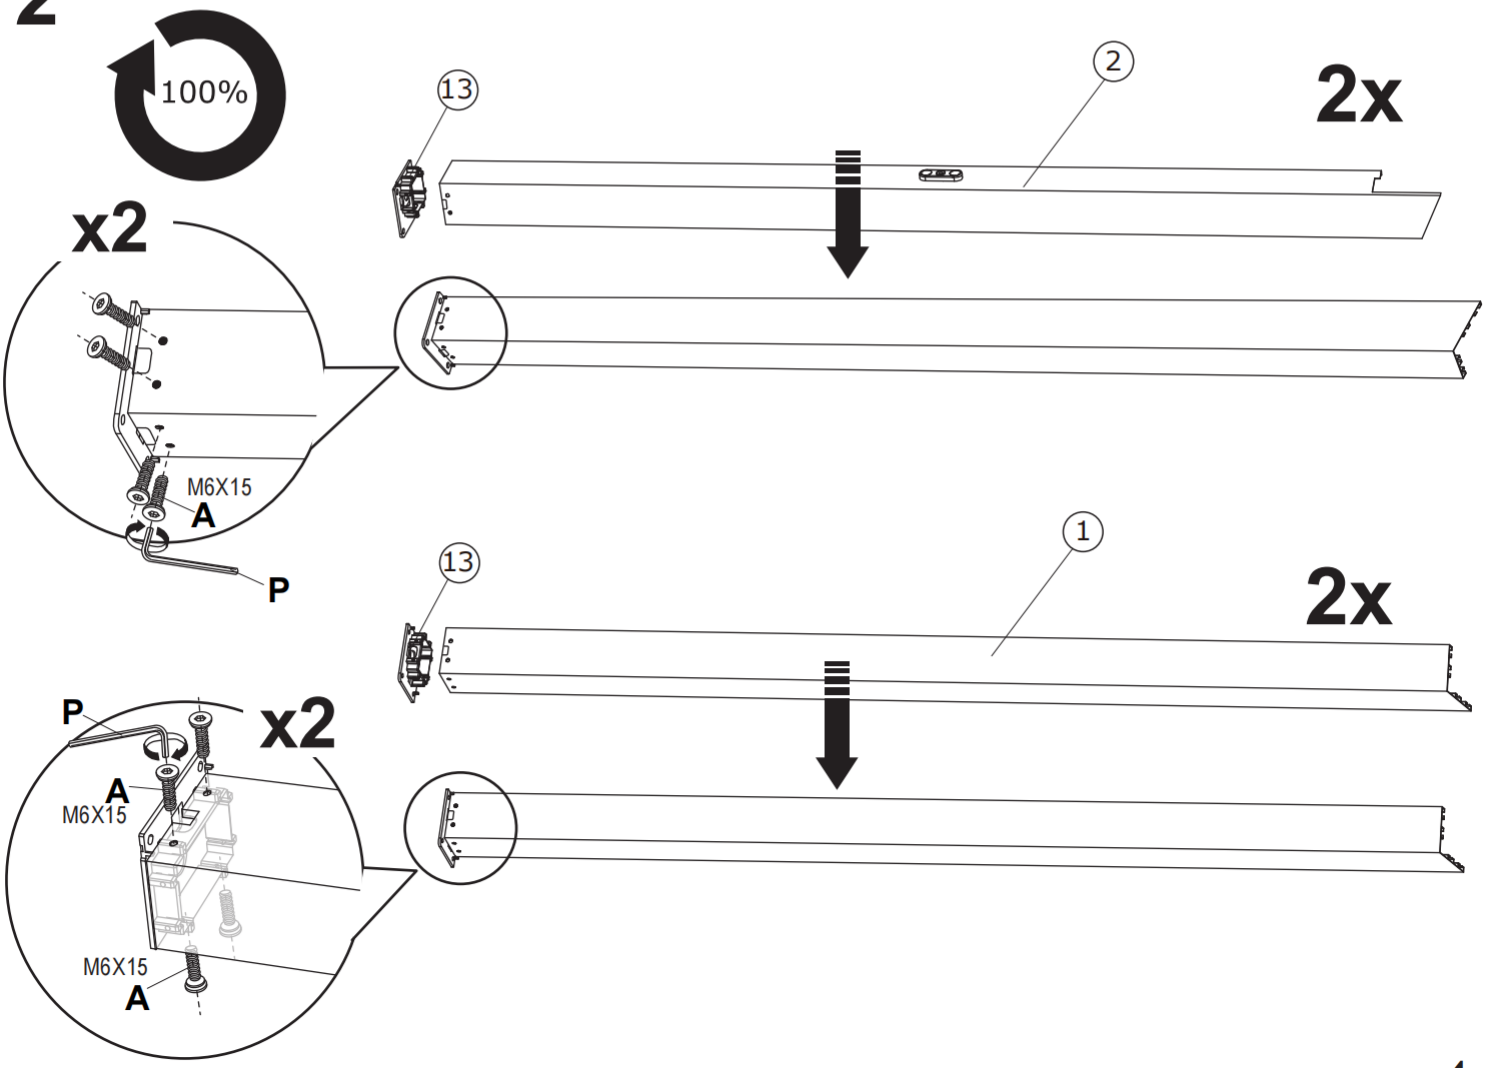


3

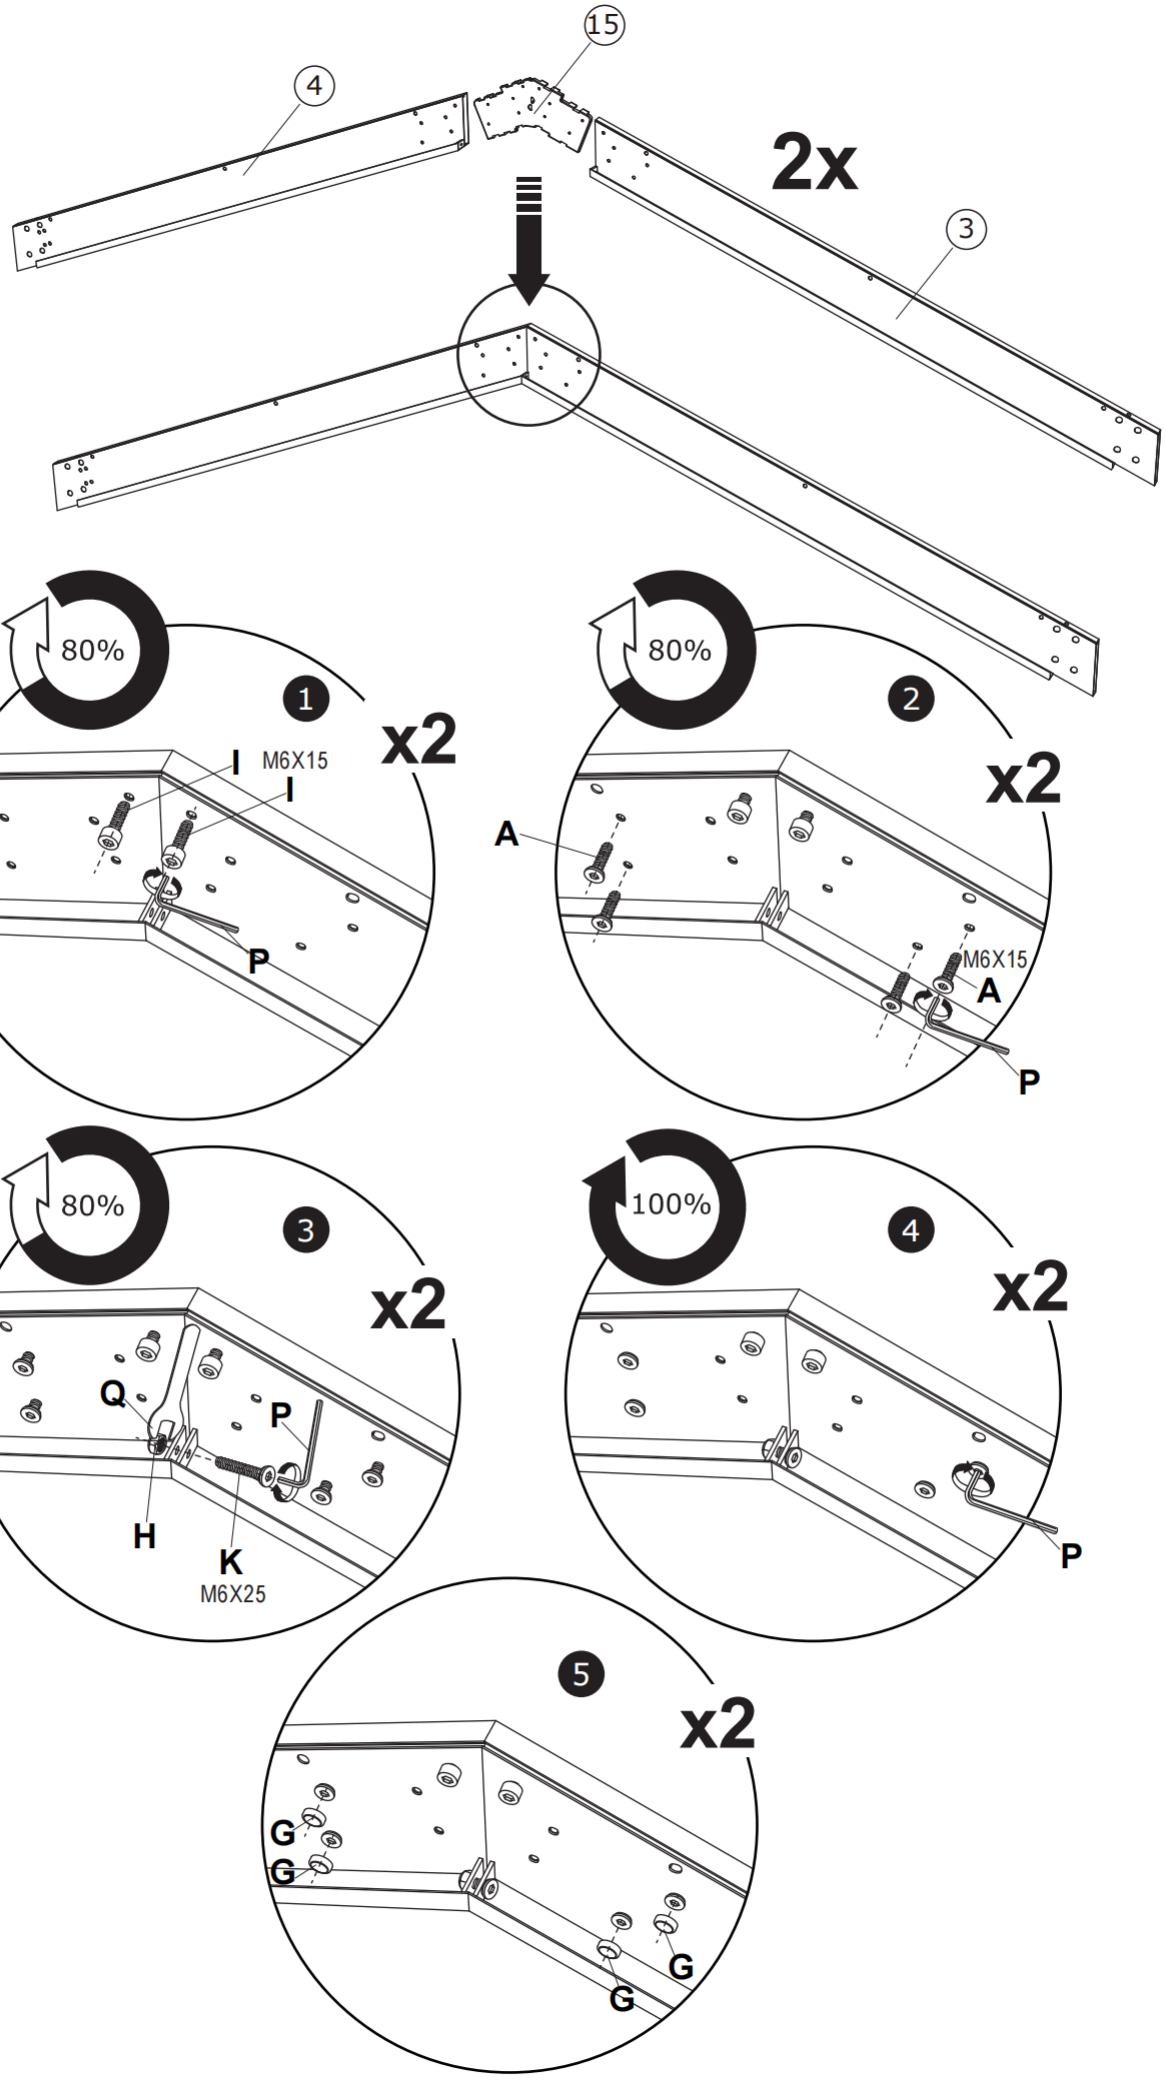
15
4
2x
3
80%
1
x2
I
M6X15
I
P
80%
2
x2
A
M6X15
A
P
80%
3
x2
Q
P
H
K
M6X25
100%
4
x2
P
5
x2
G
G
G
G


4

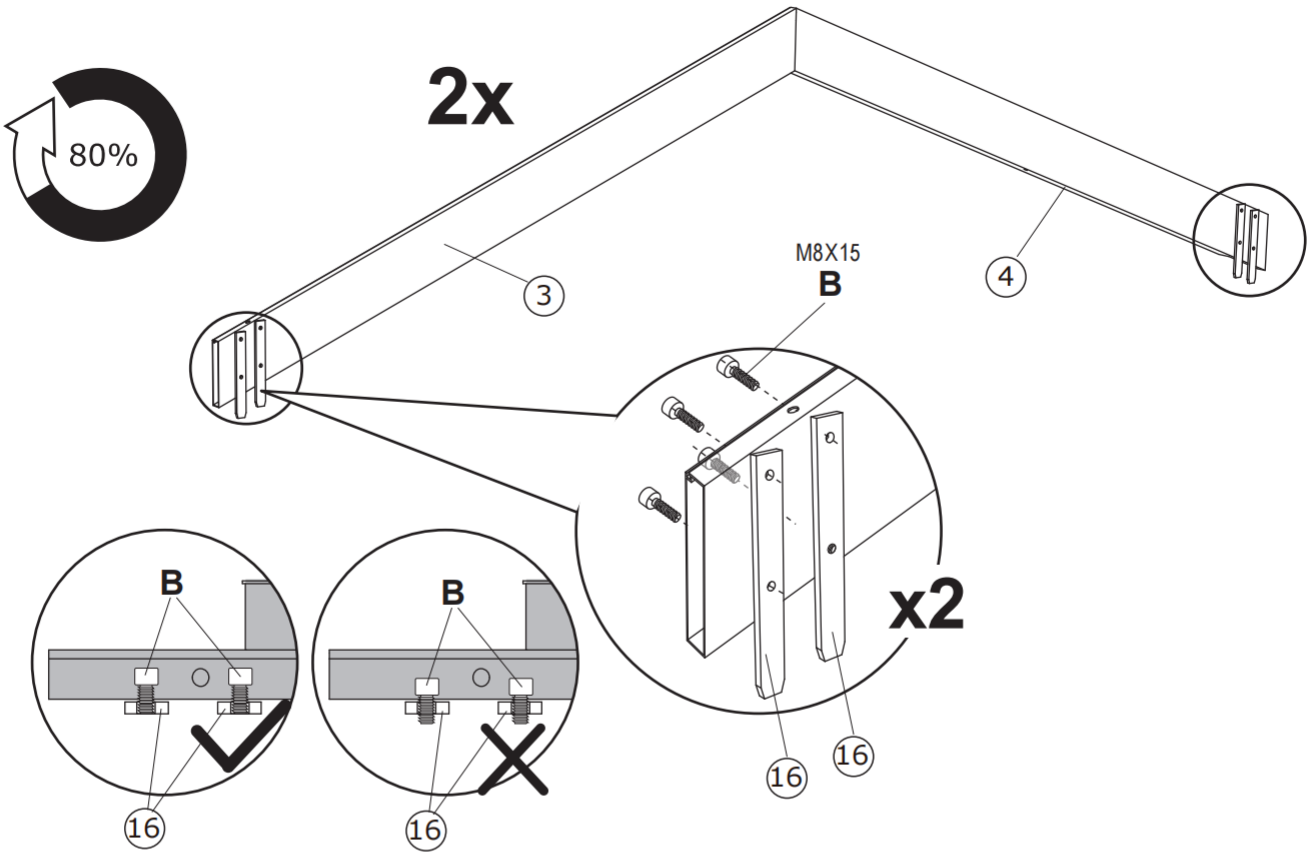


5

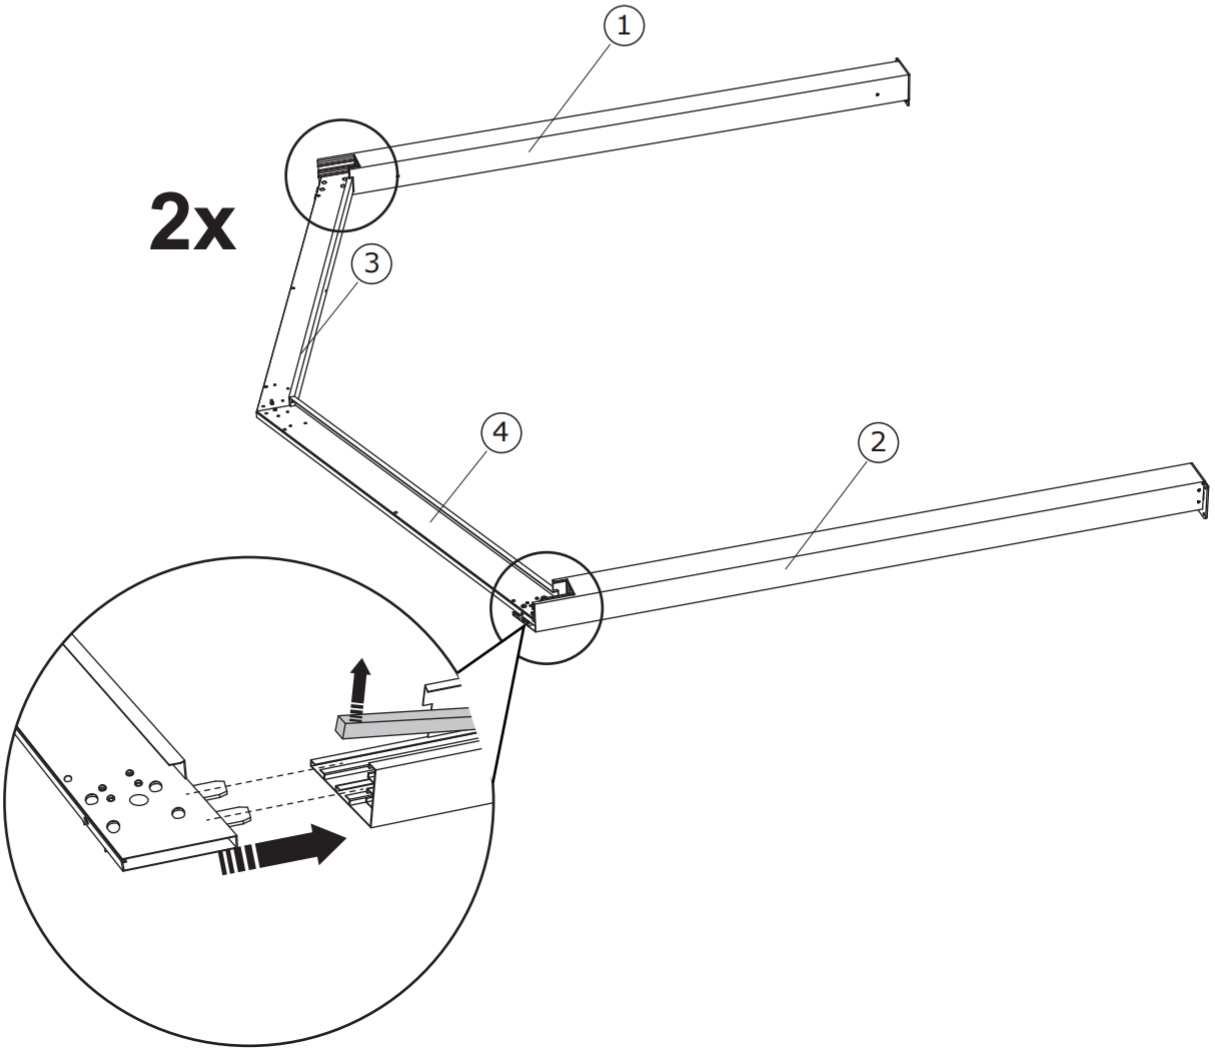


6

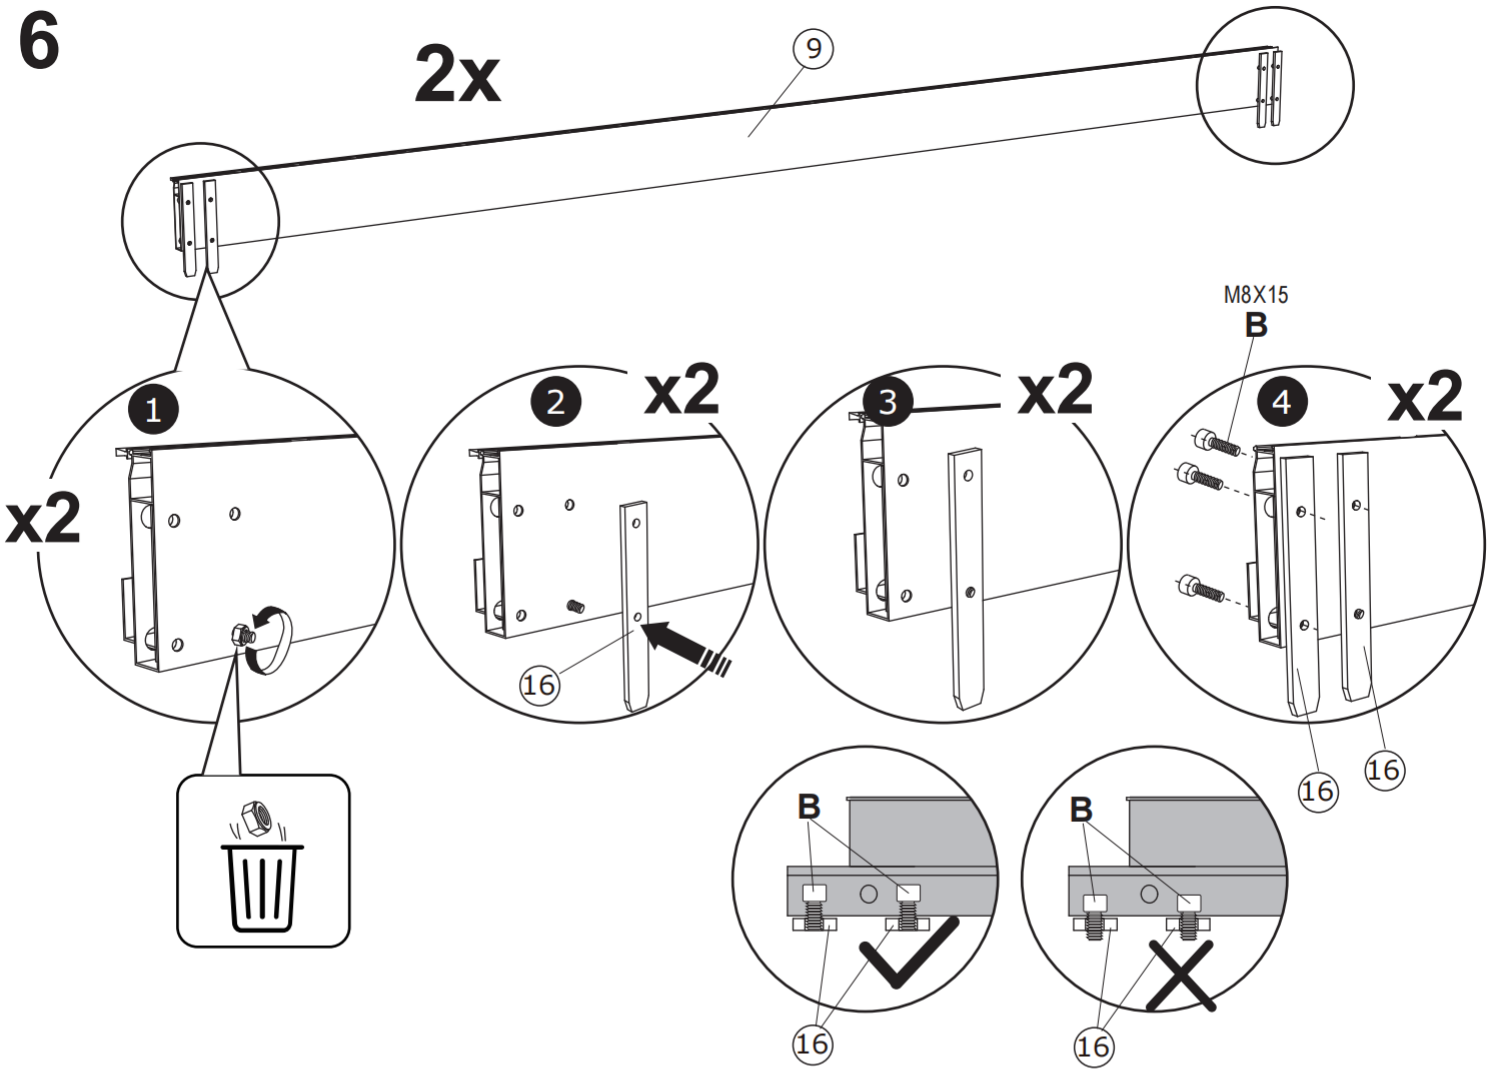


7

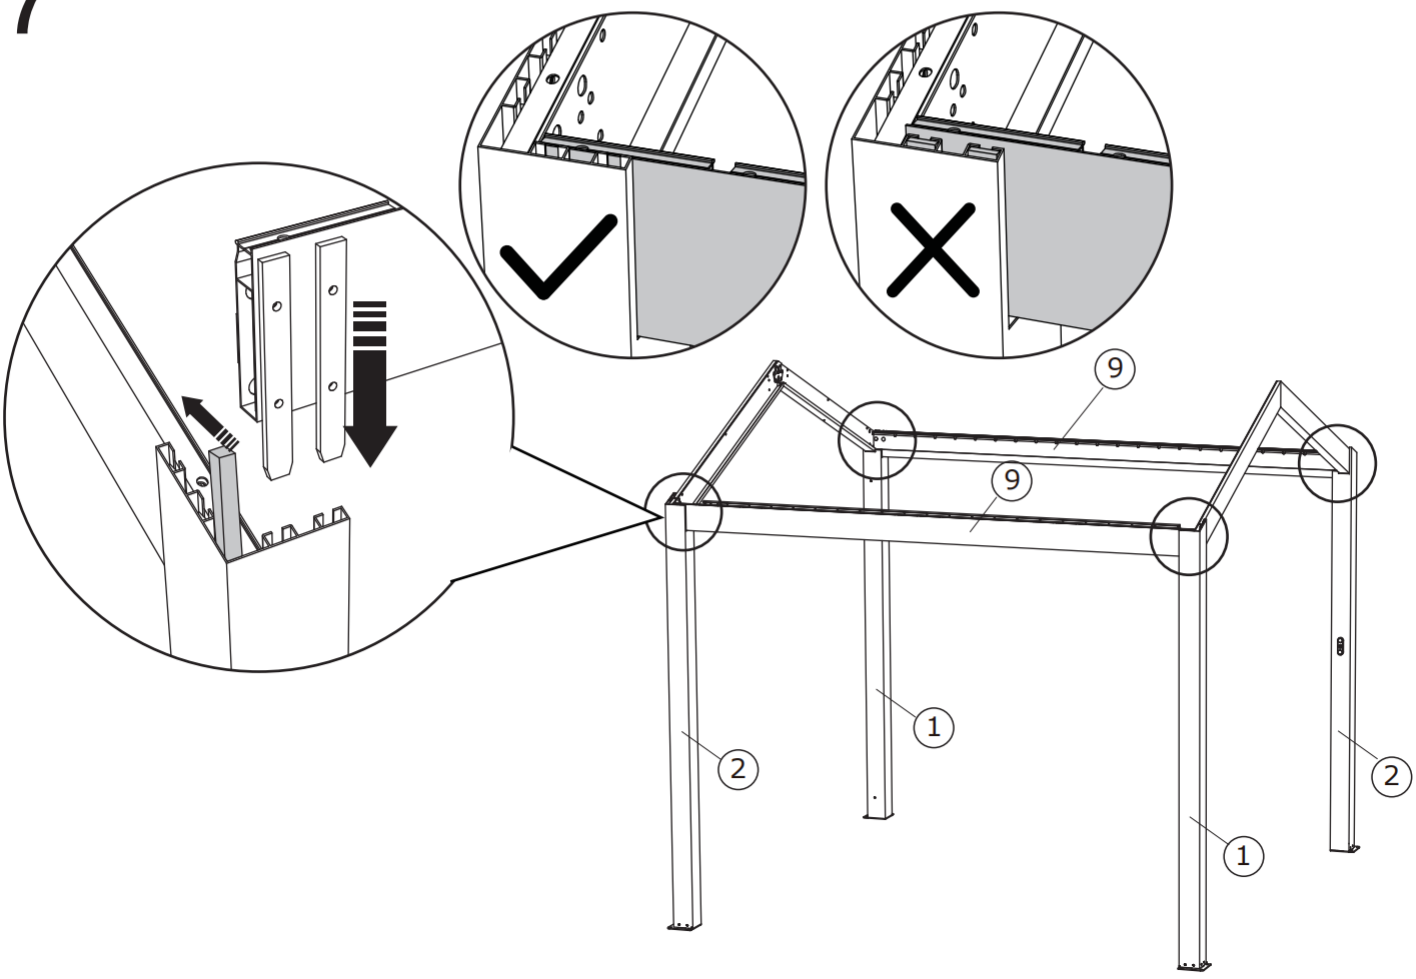


8

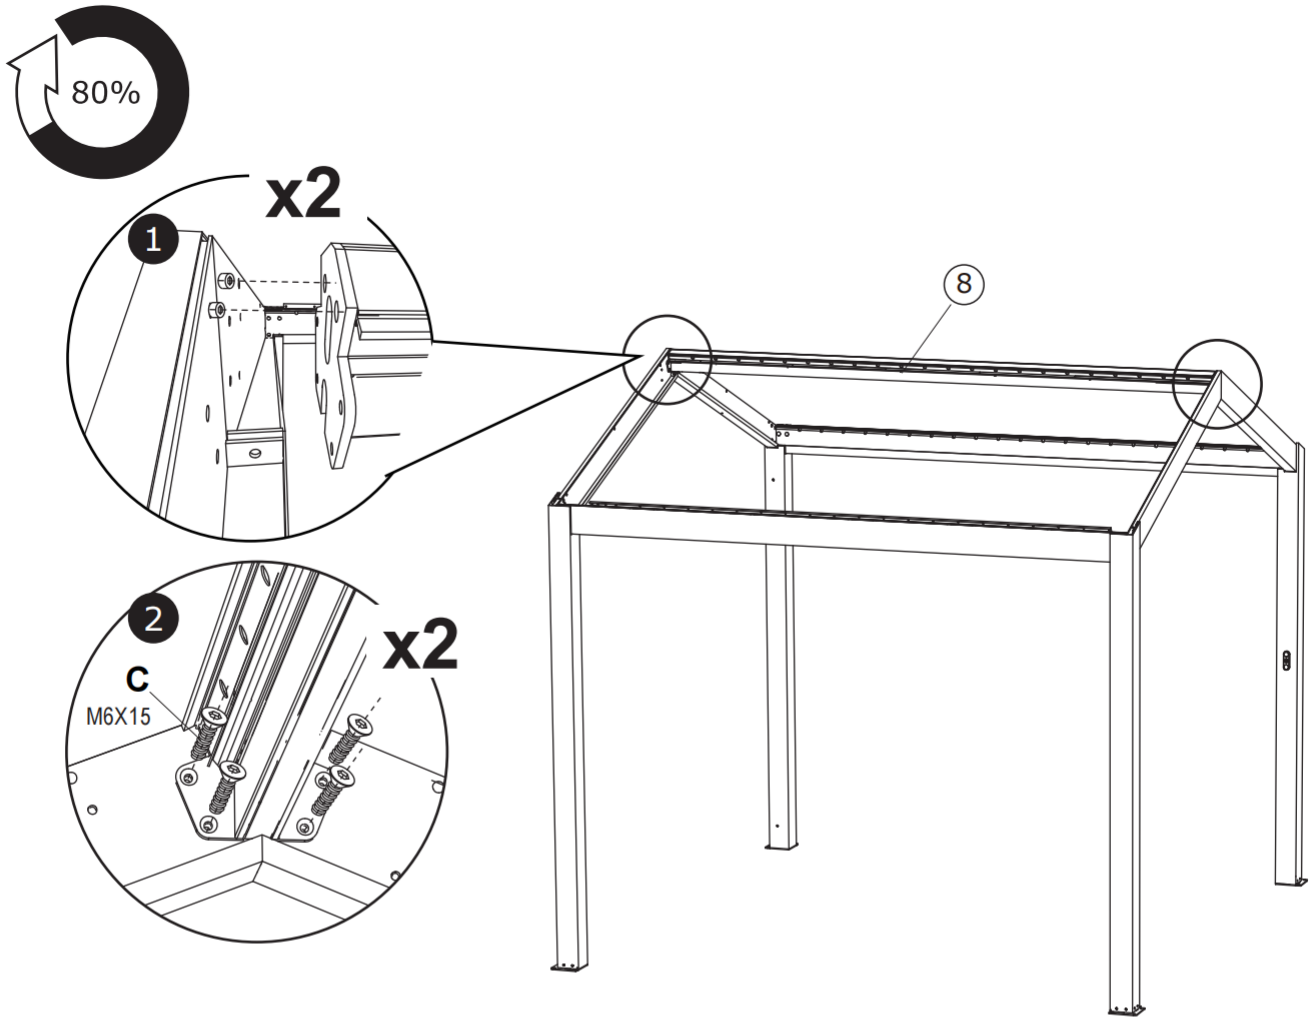
80%
x2
1
8
2
C
M6X15
x2


9

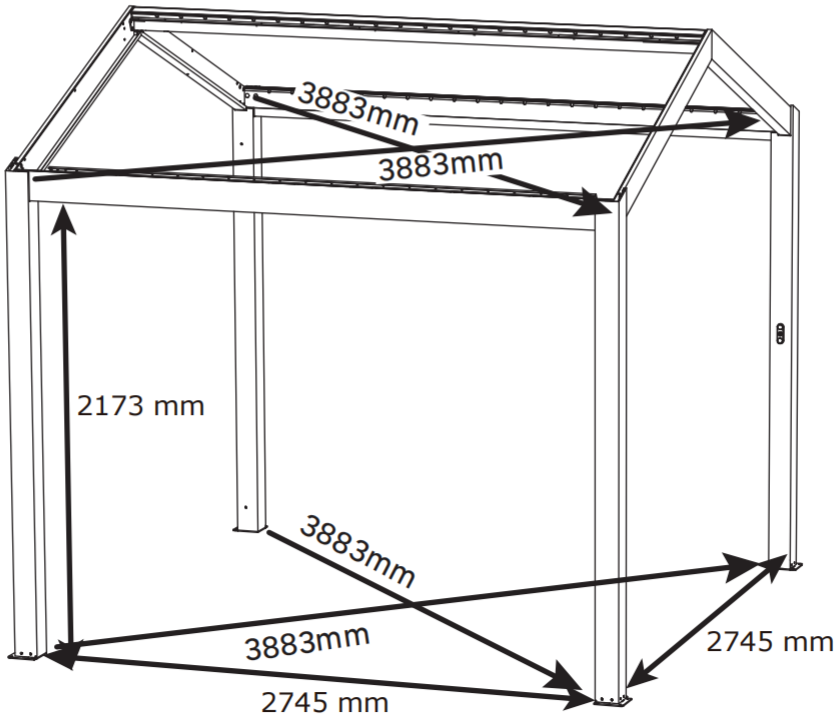
3883mm
3883mm
2173 mm
3883mm
3883mm
2745 mm
2745 mm


10

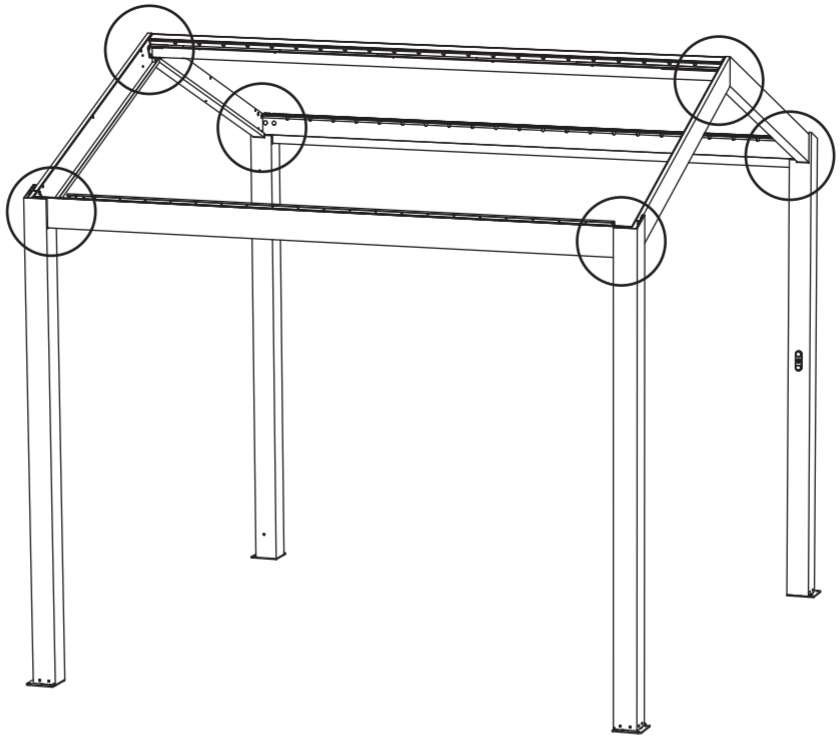


11

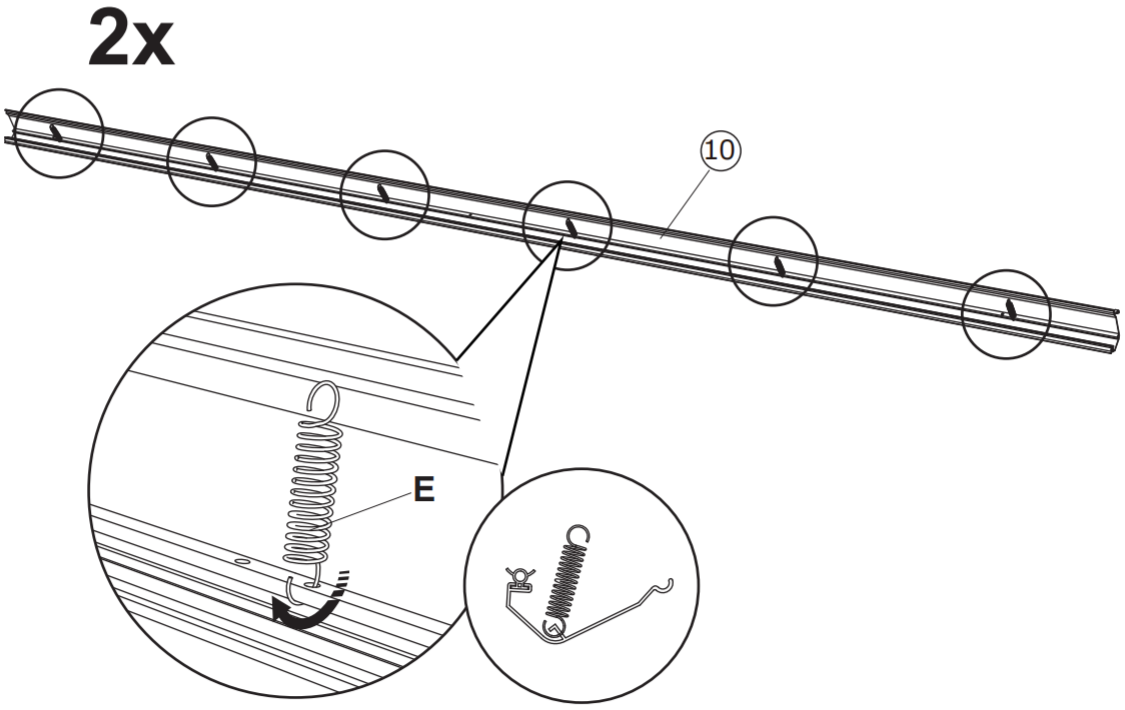


12

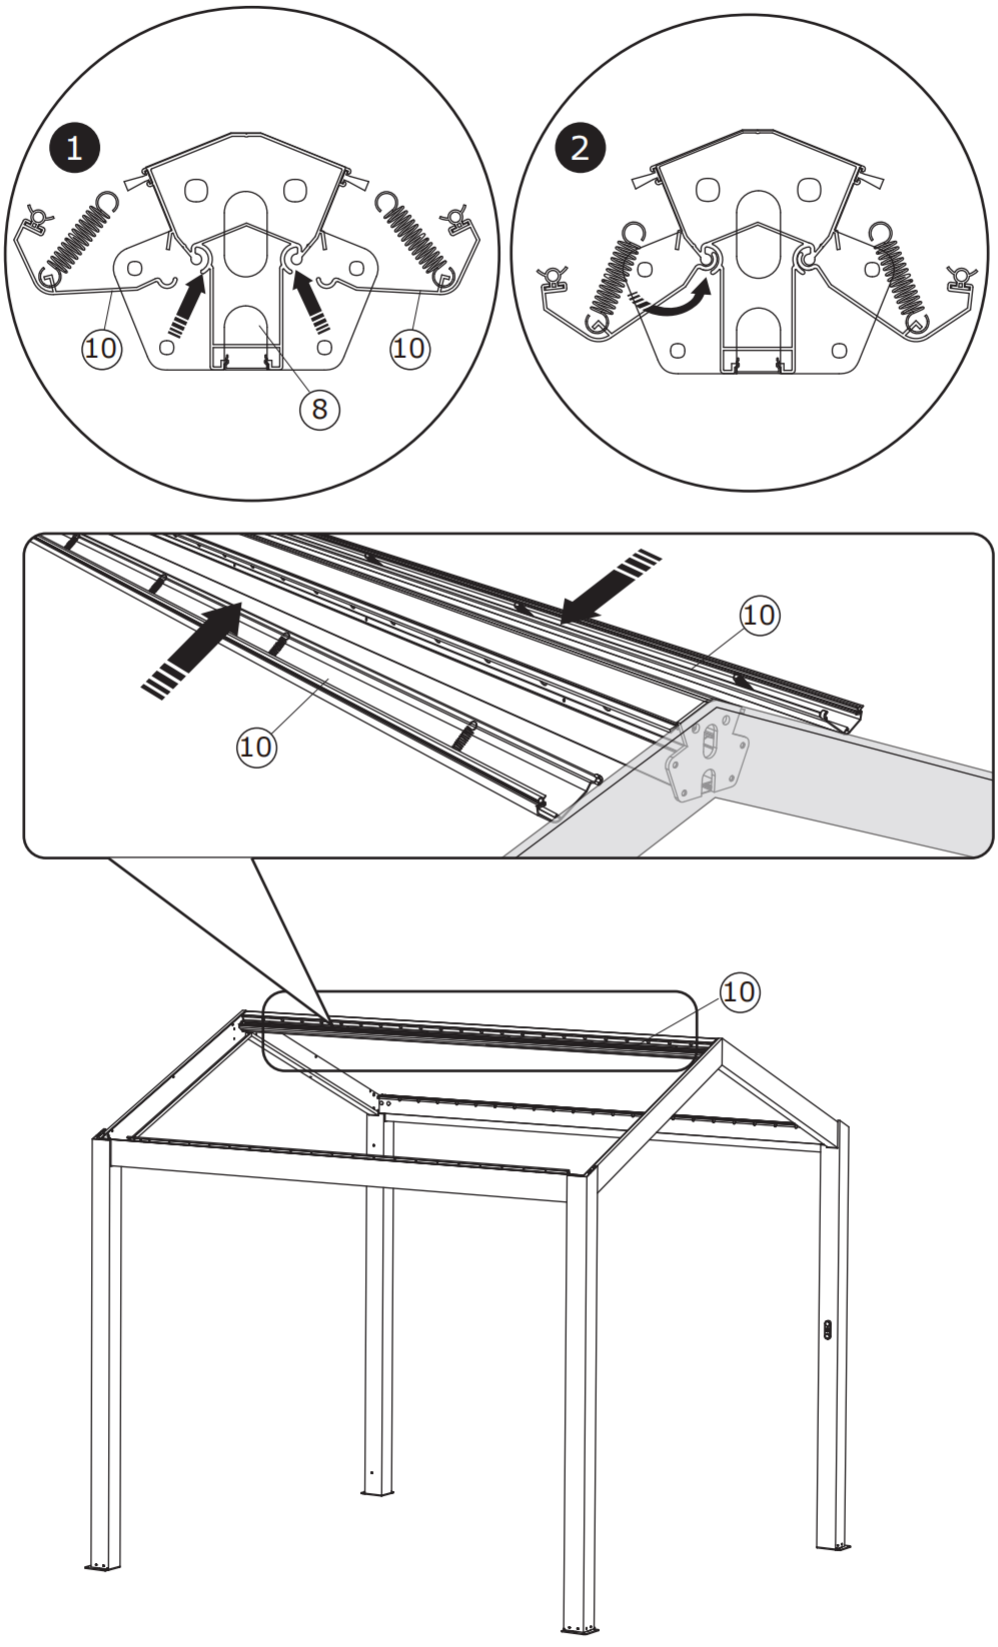


13

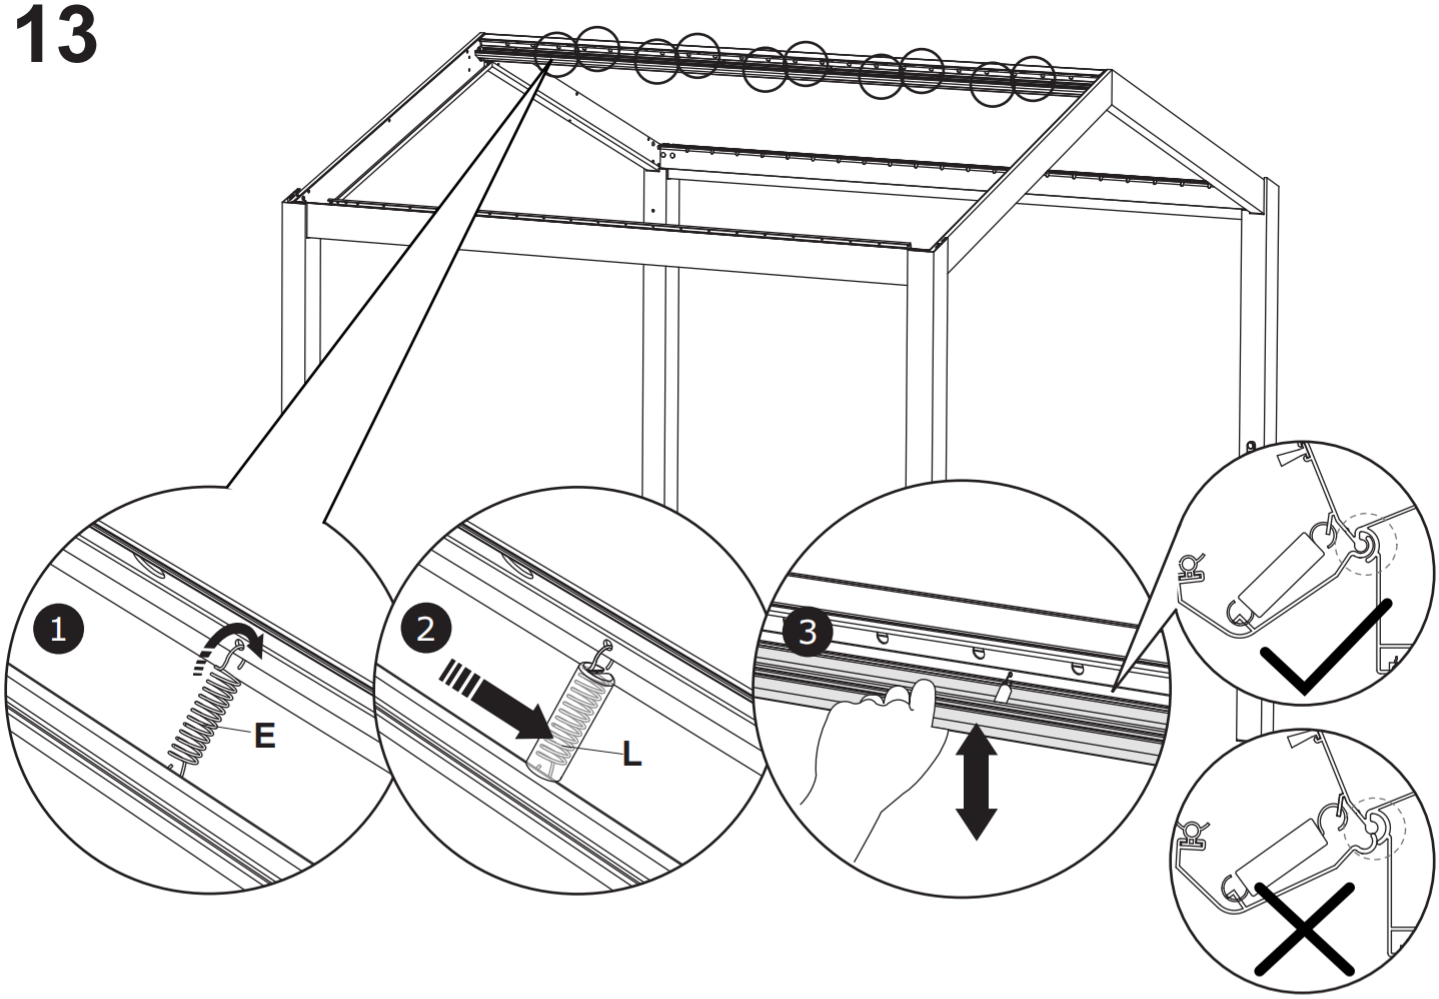


14

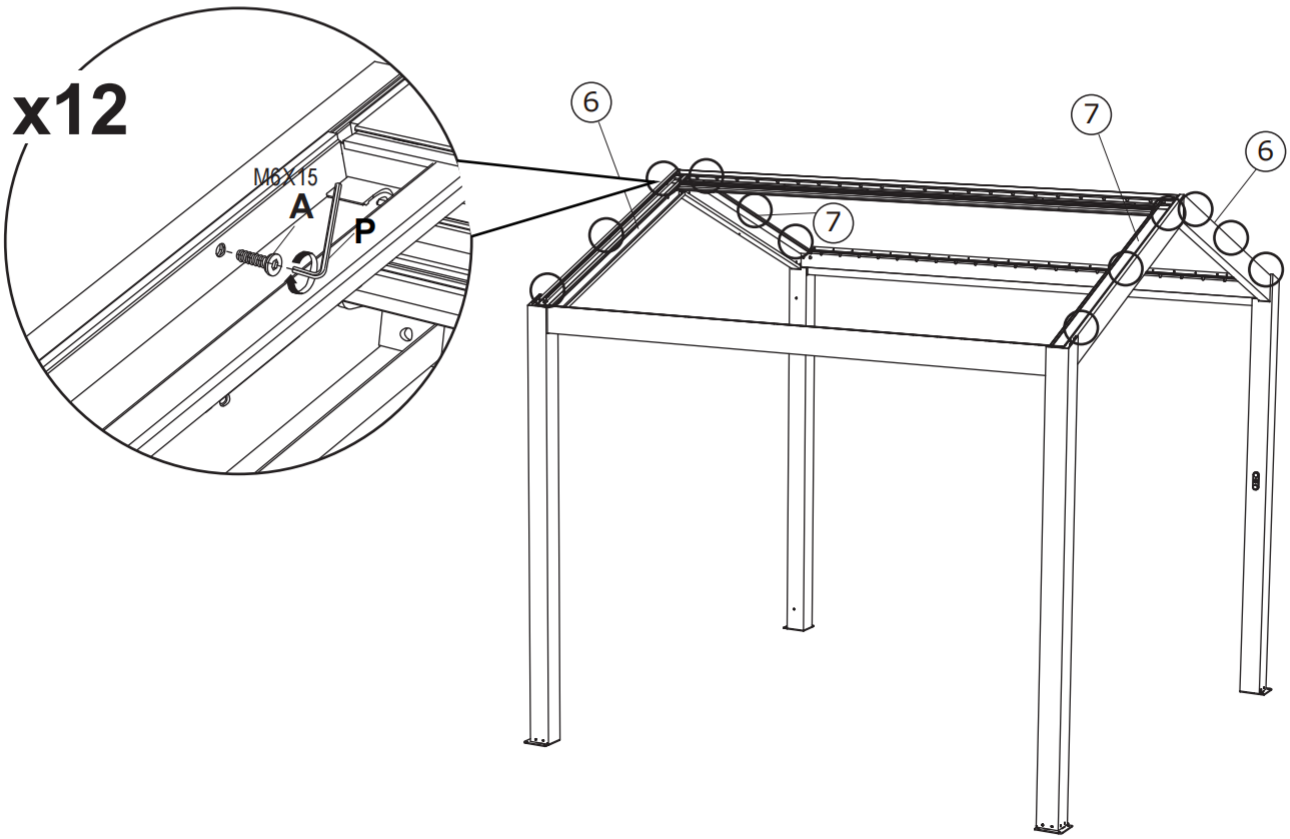


15

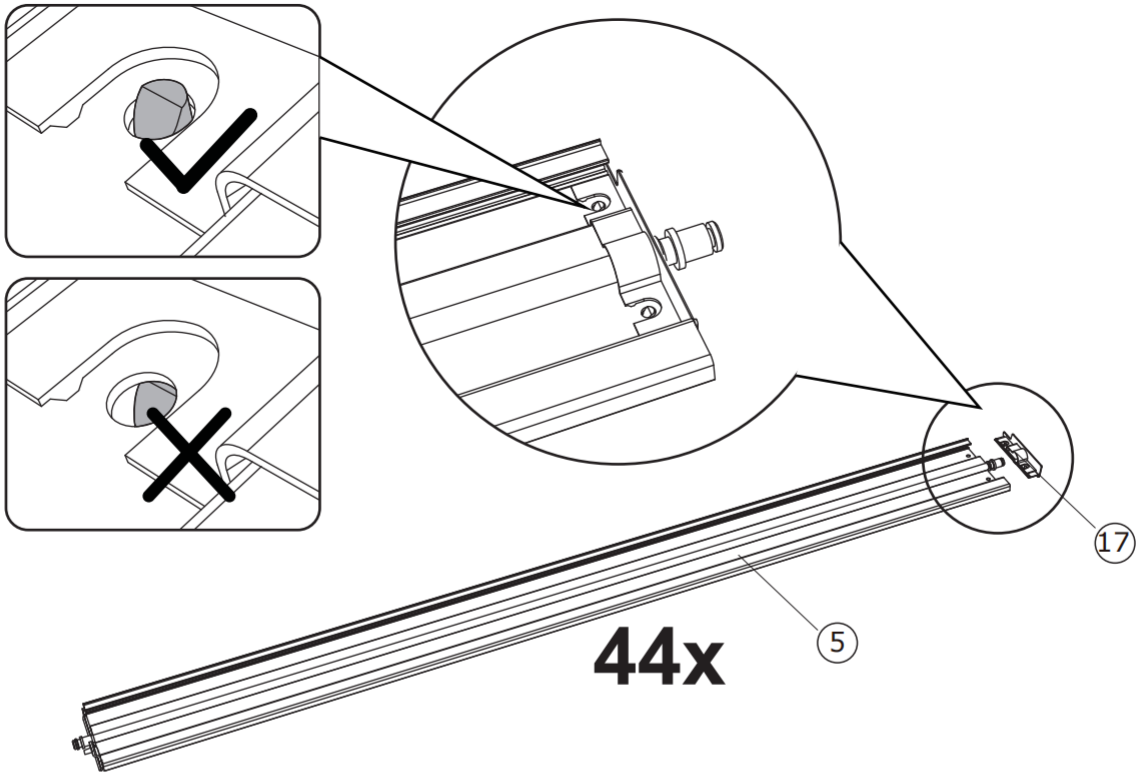


16

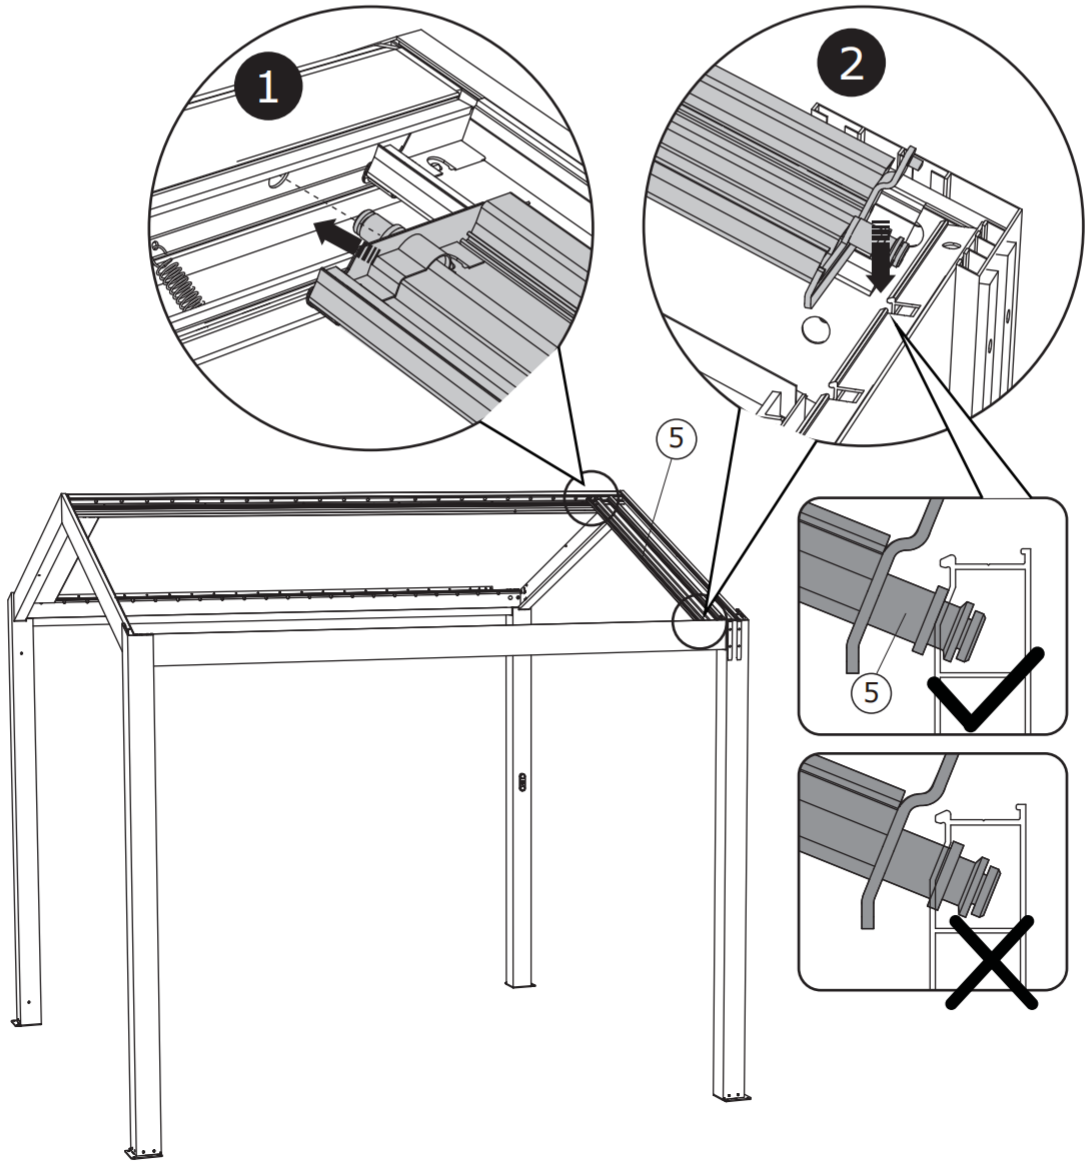



17

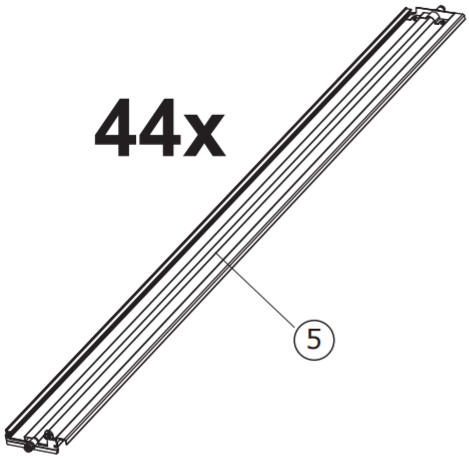


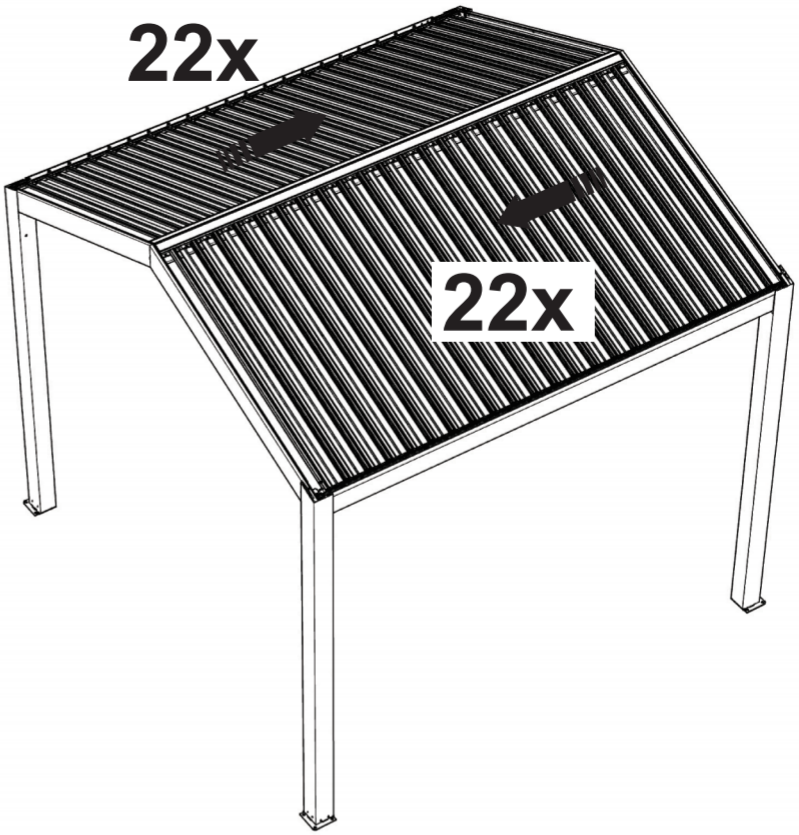



18

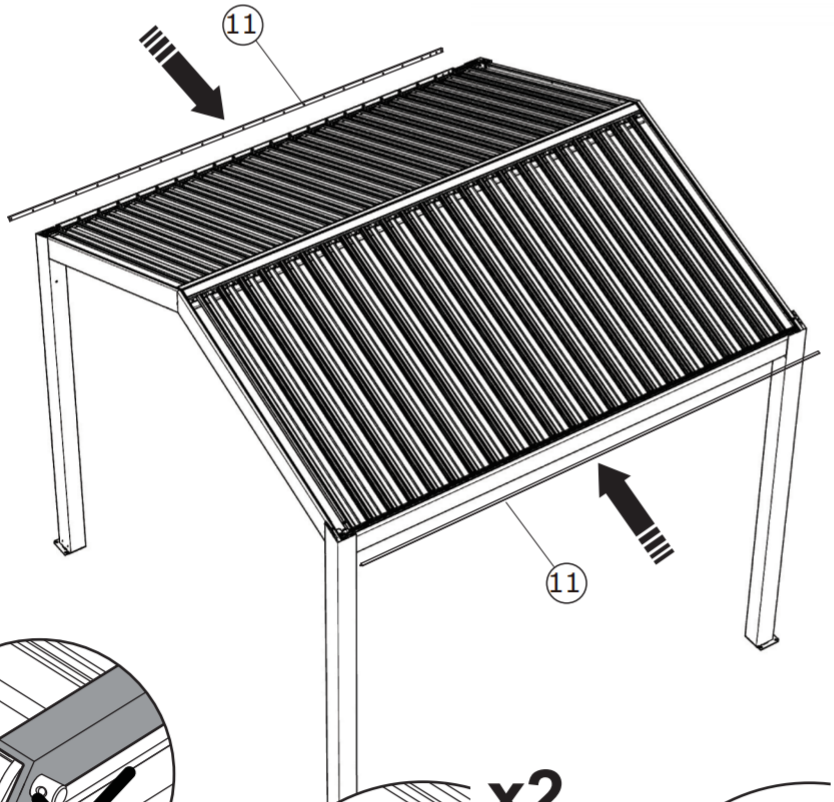


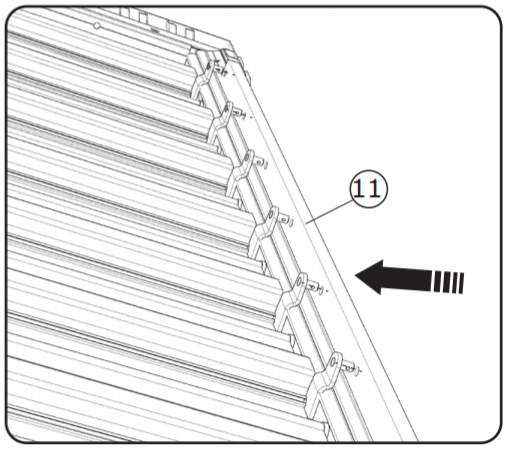


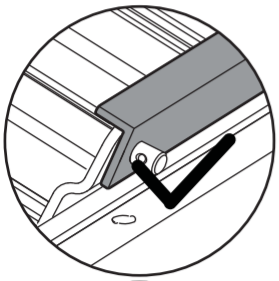

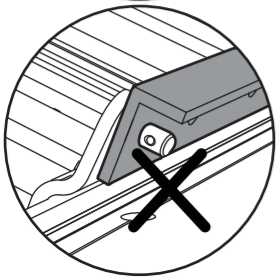


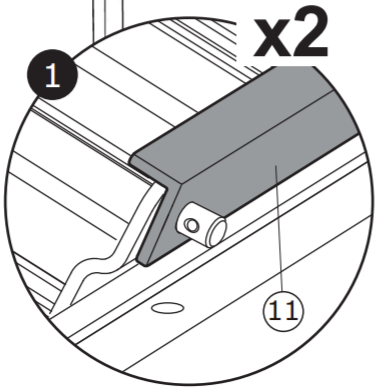

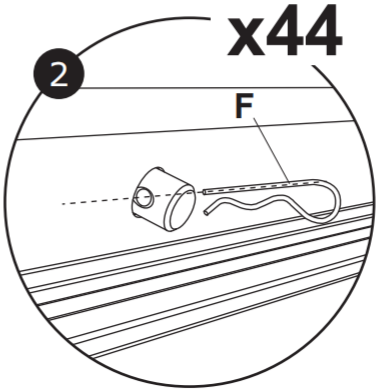


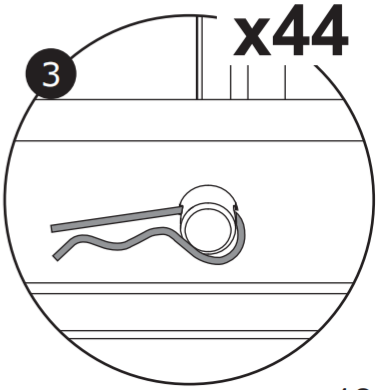


19

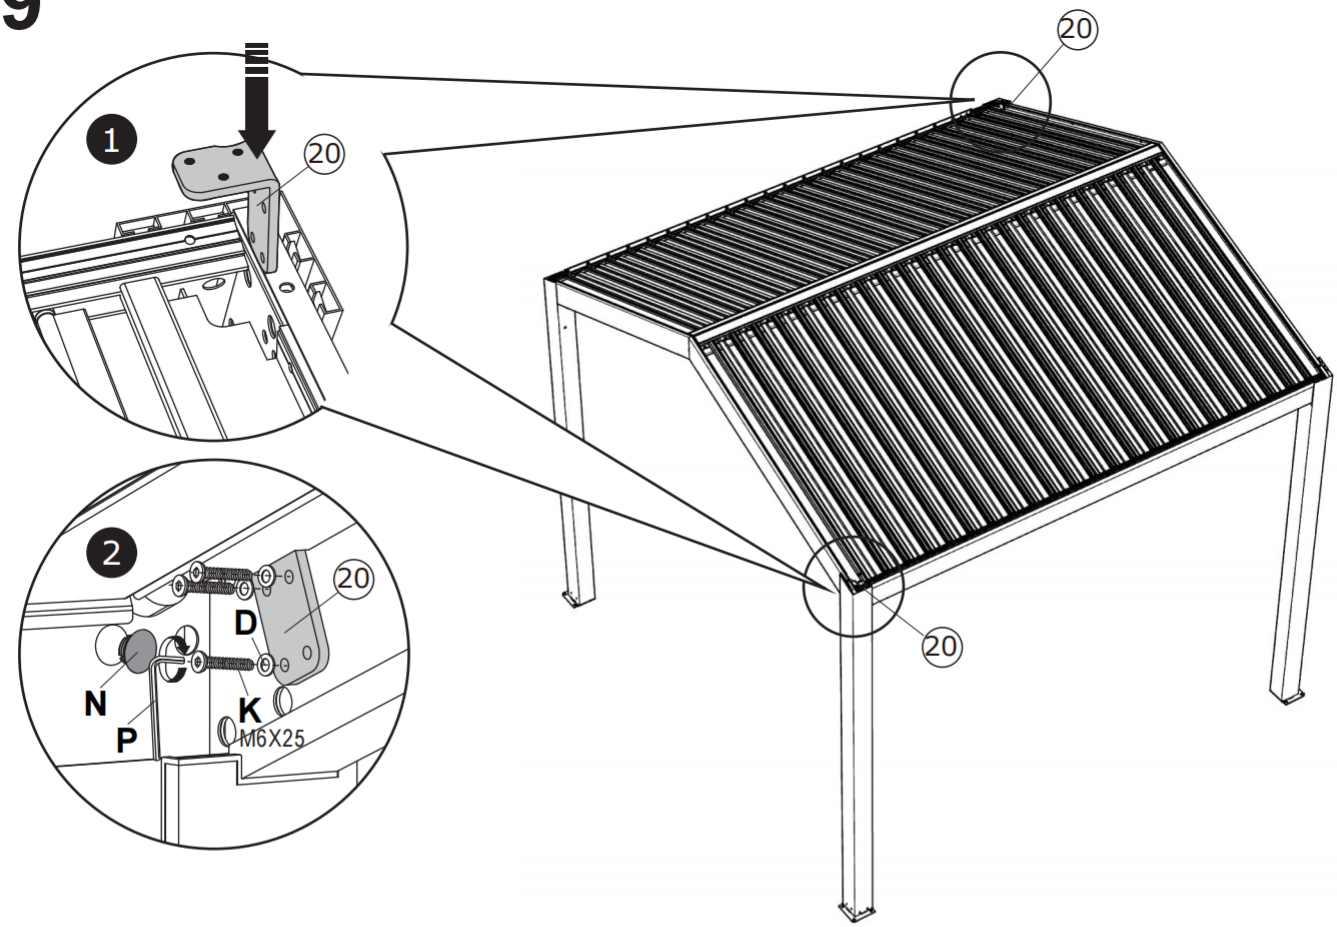


20

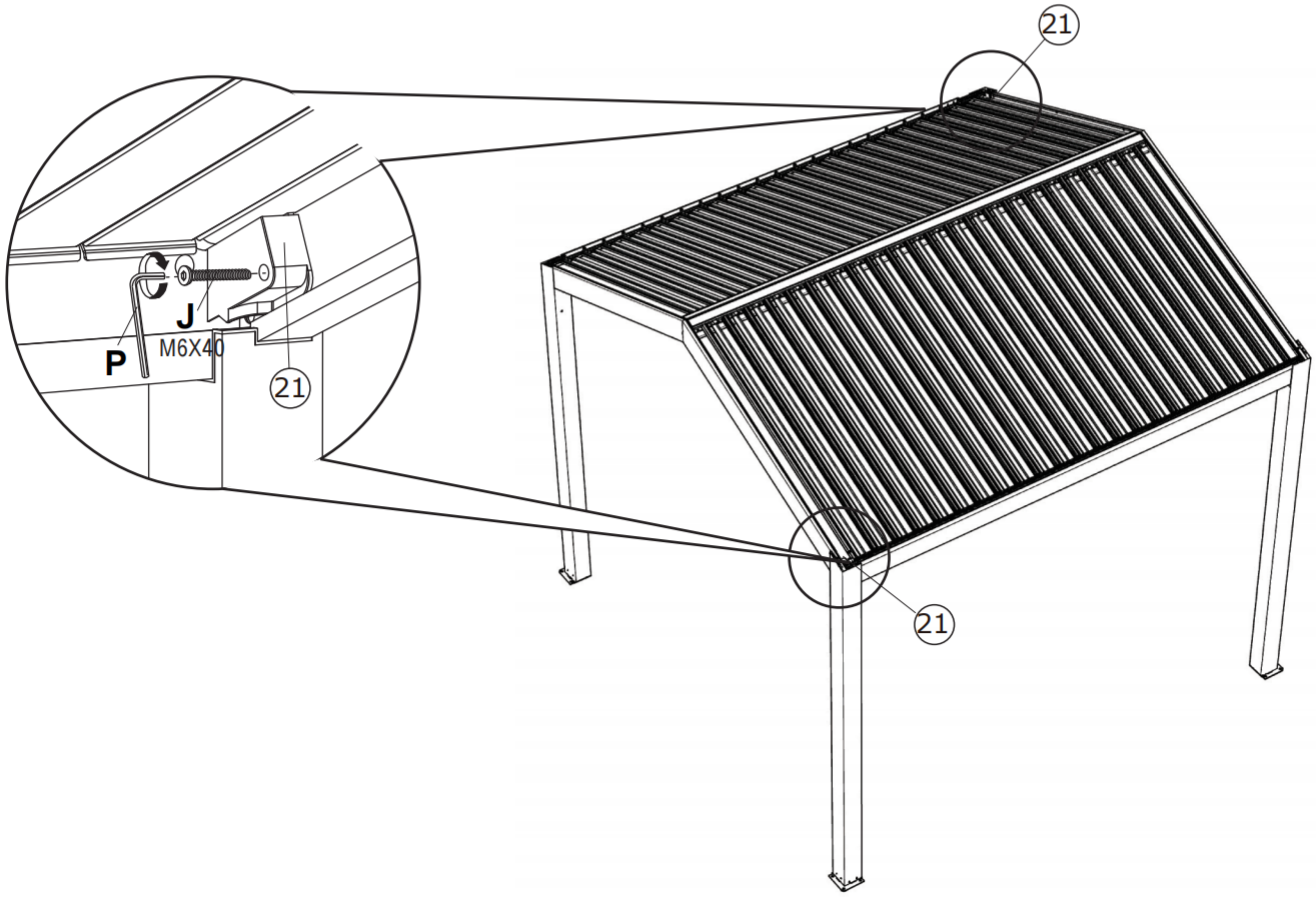


21

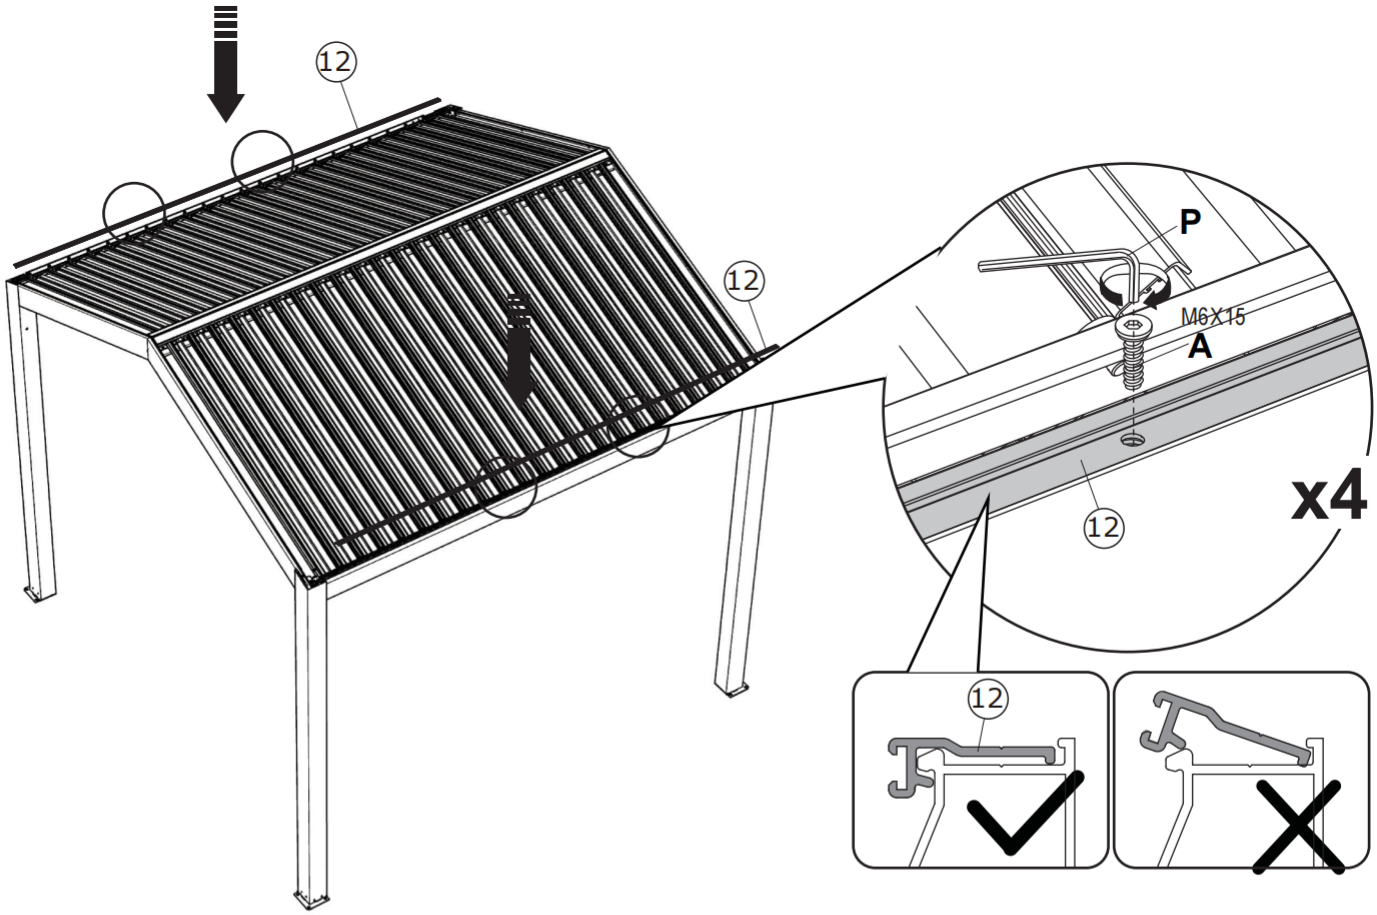
12
12
P
M6X15
A
x4
12
12


22

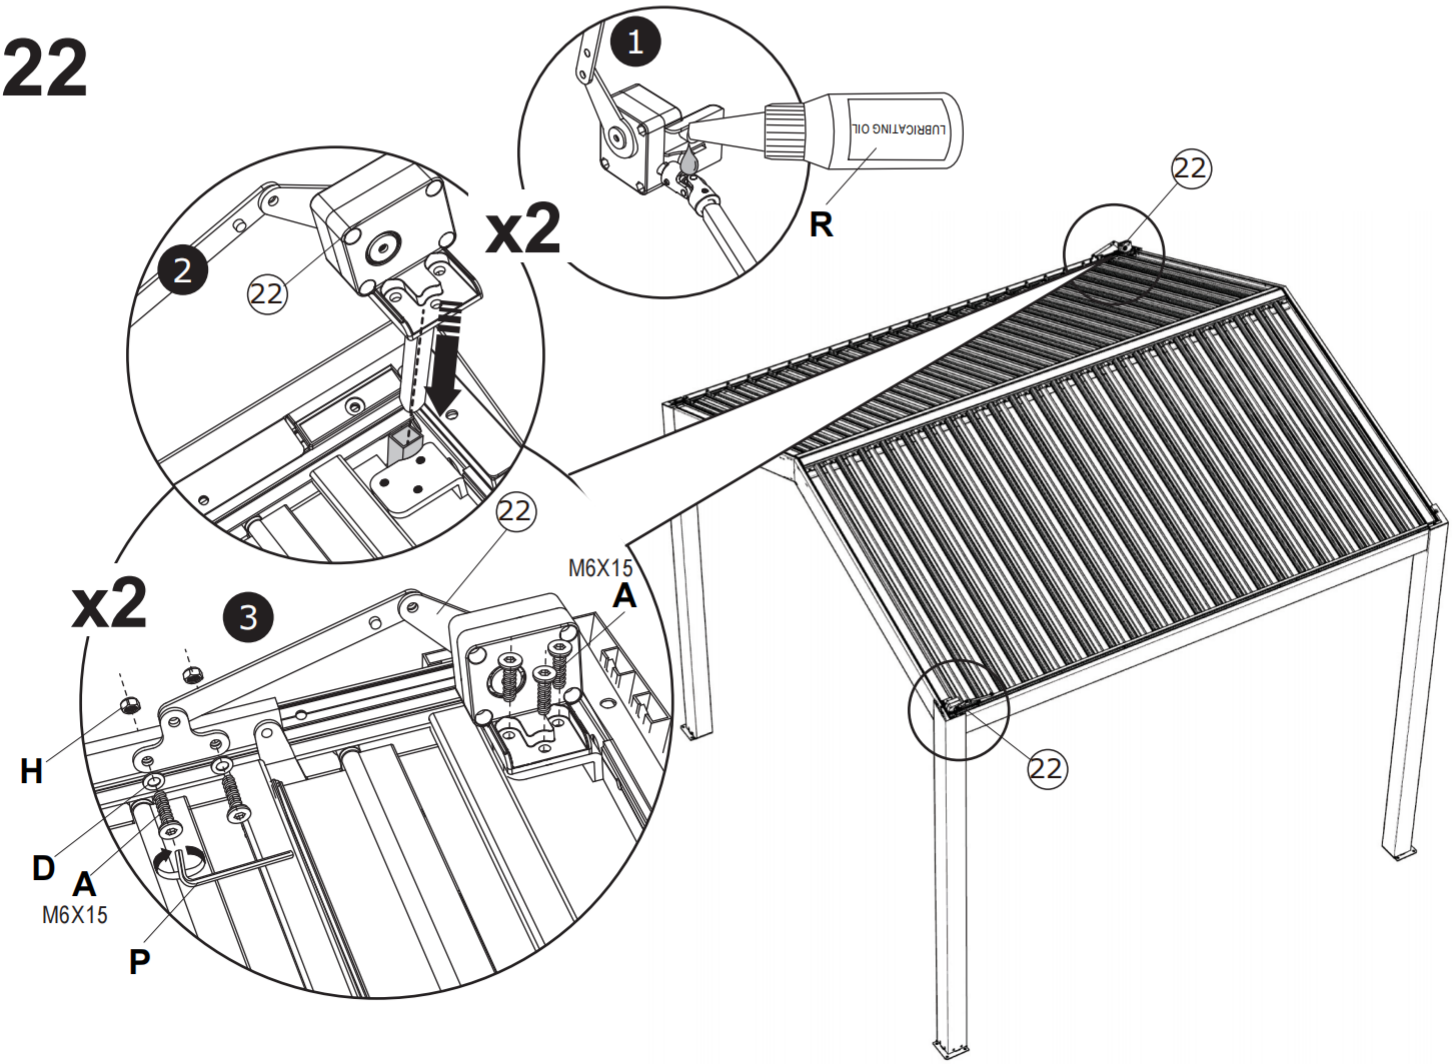
1
LUBRICATING OIL
R
x2
2
22
22
22
x2
3
M6X15
A
H
D
A
M6X15
P
22


23

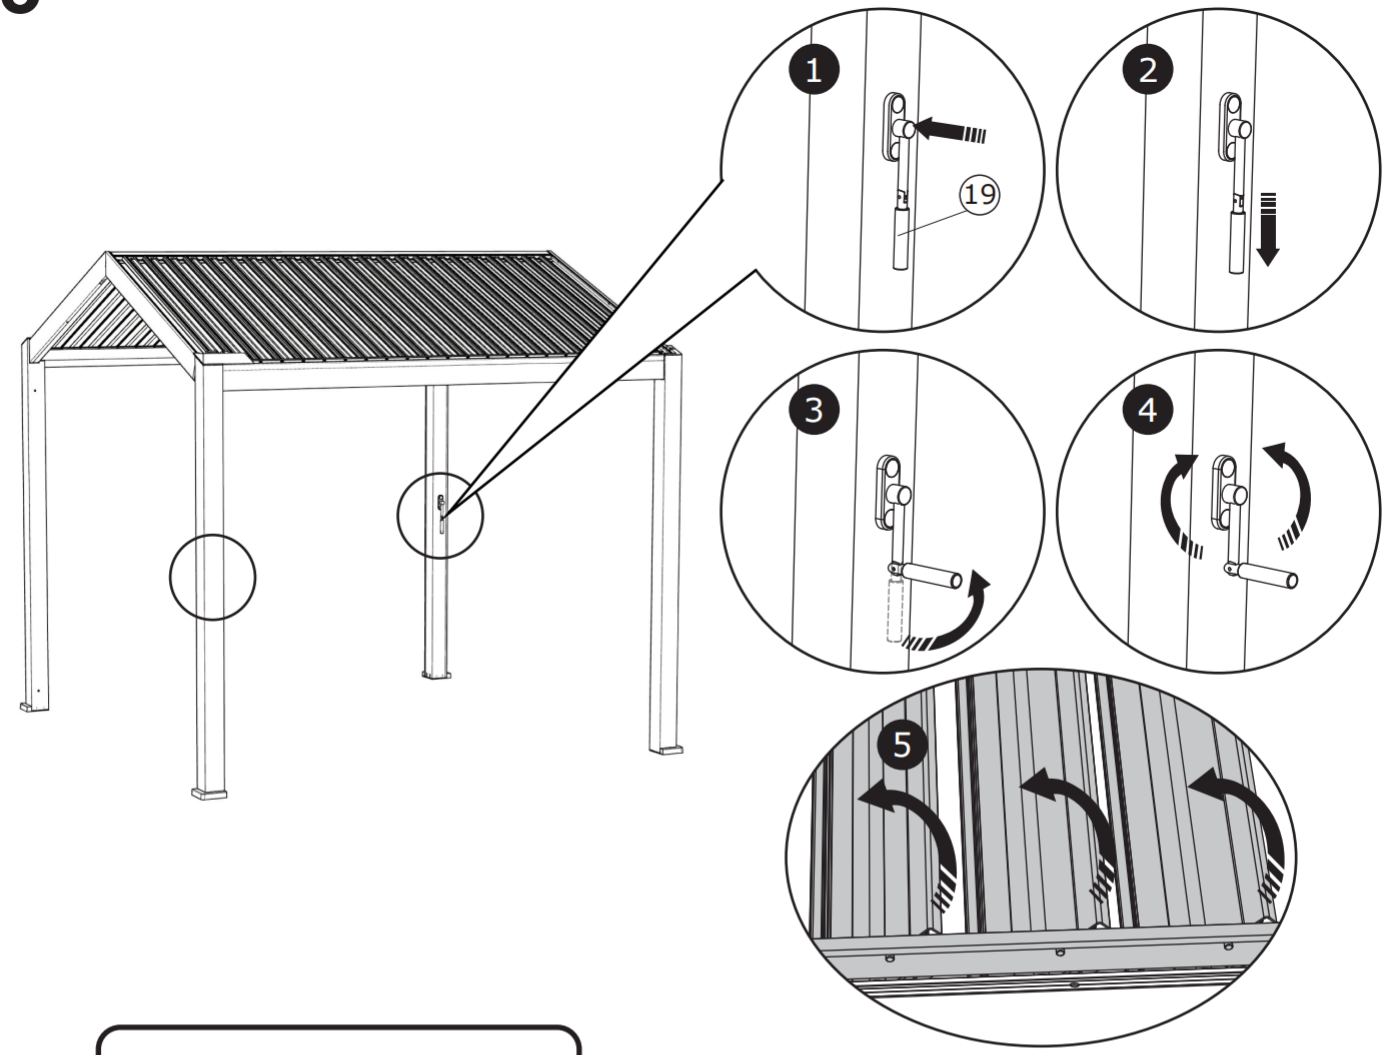


24

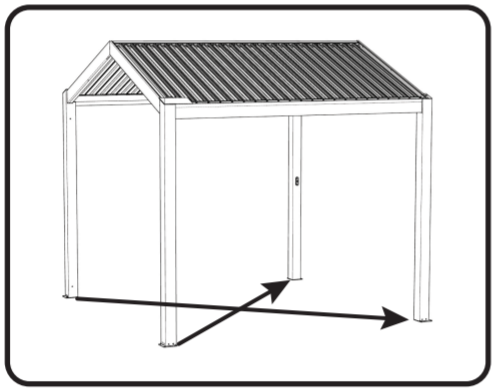


25

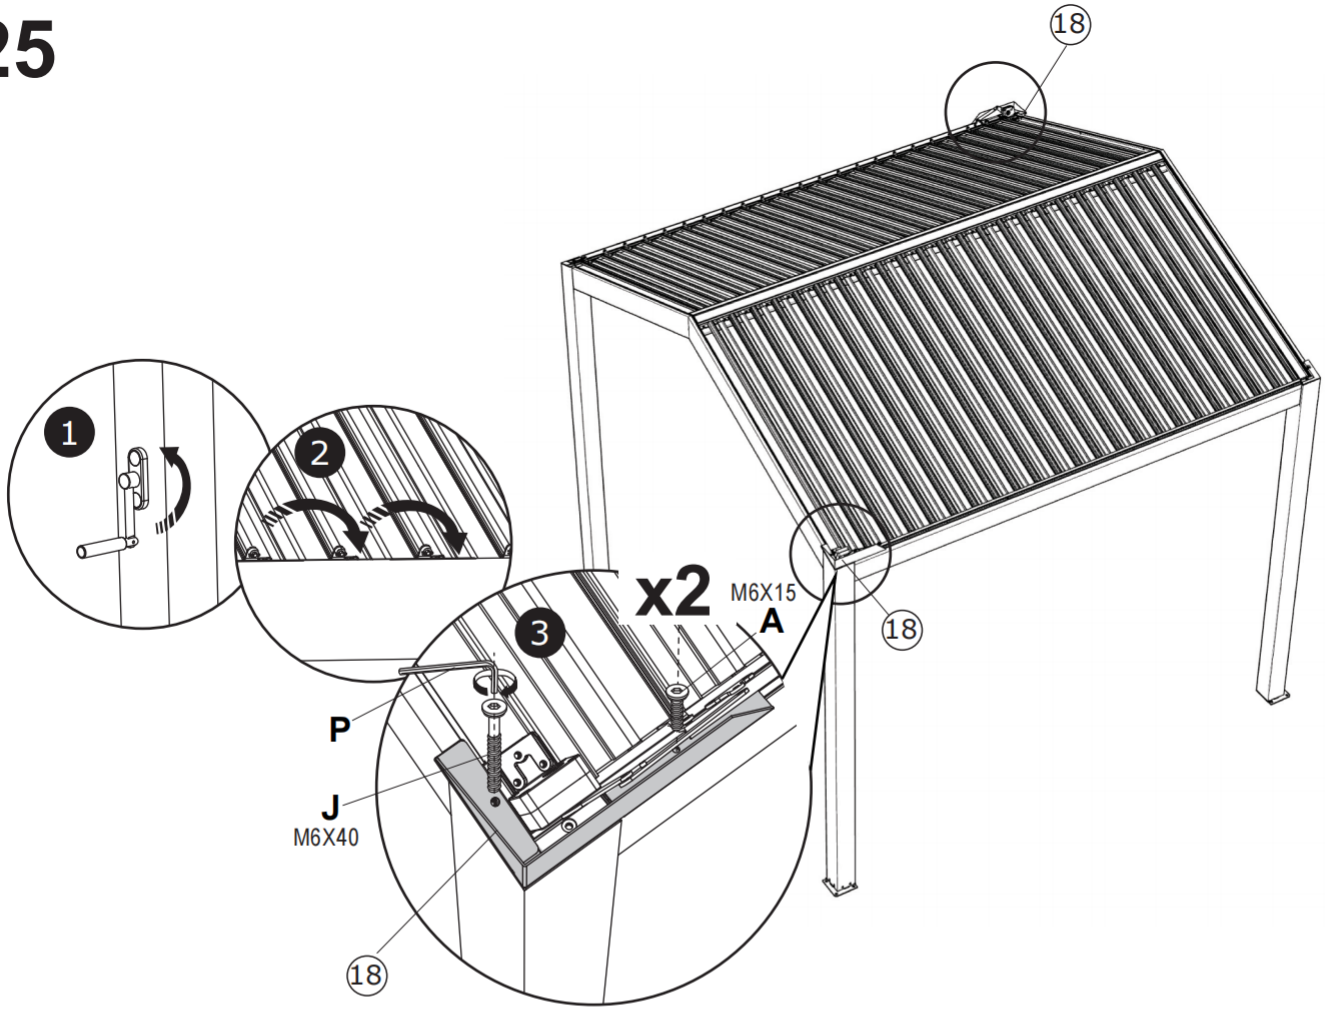



26

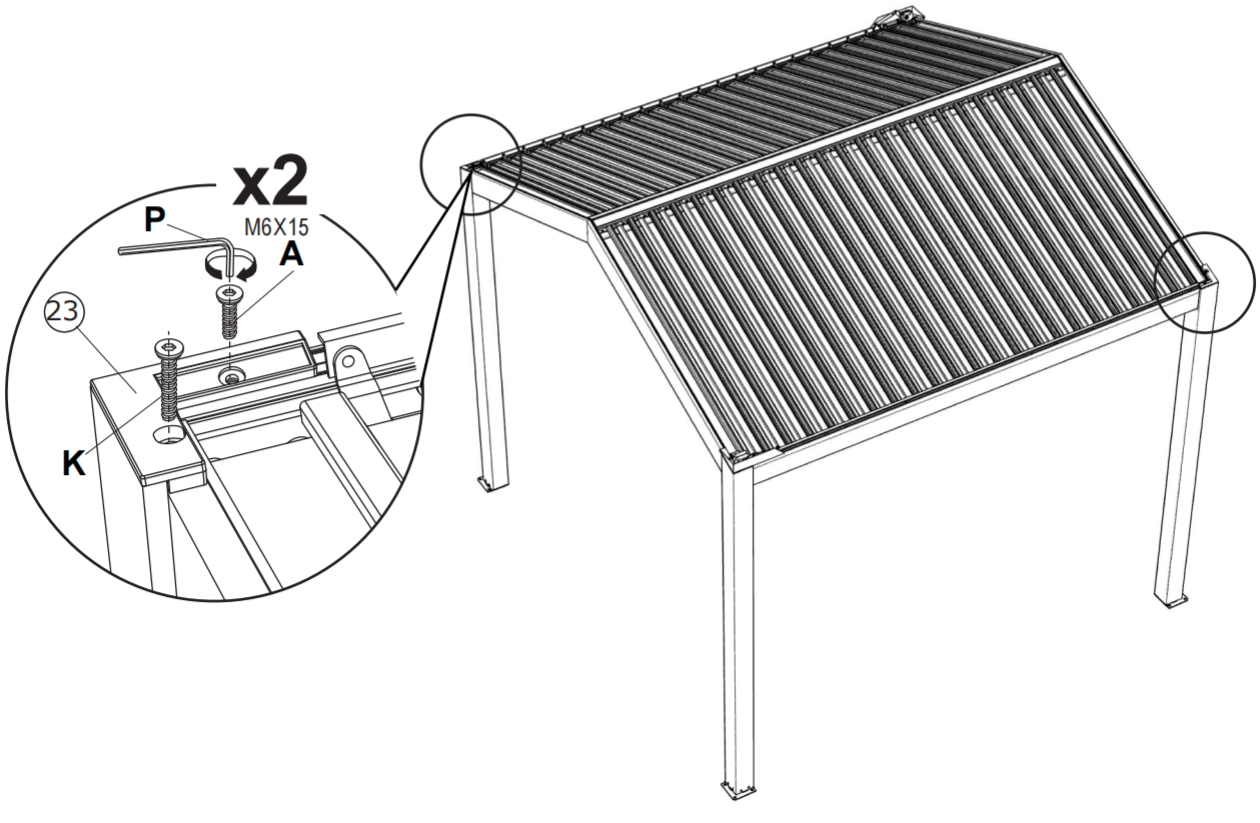


27

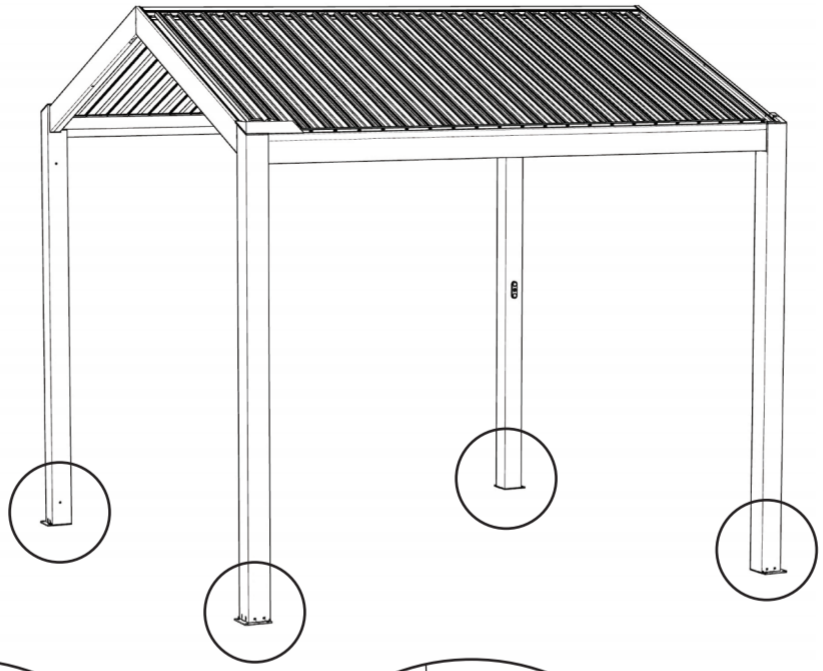


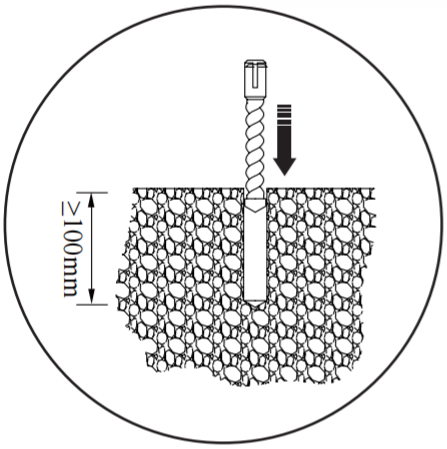

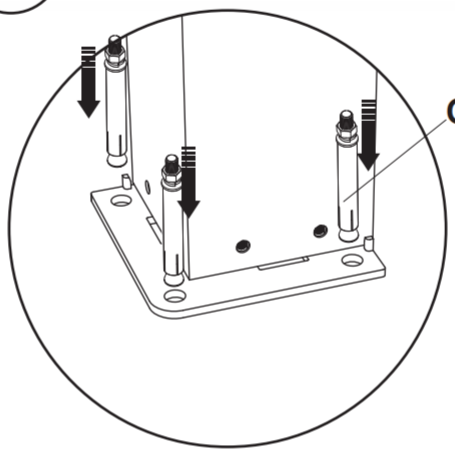


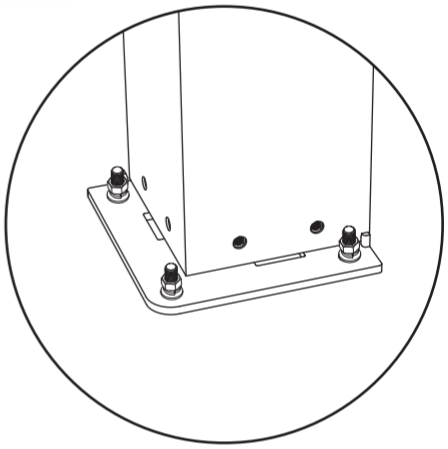


28

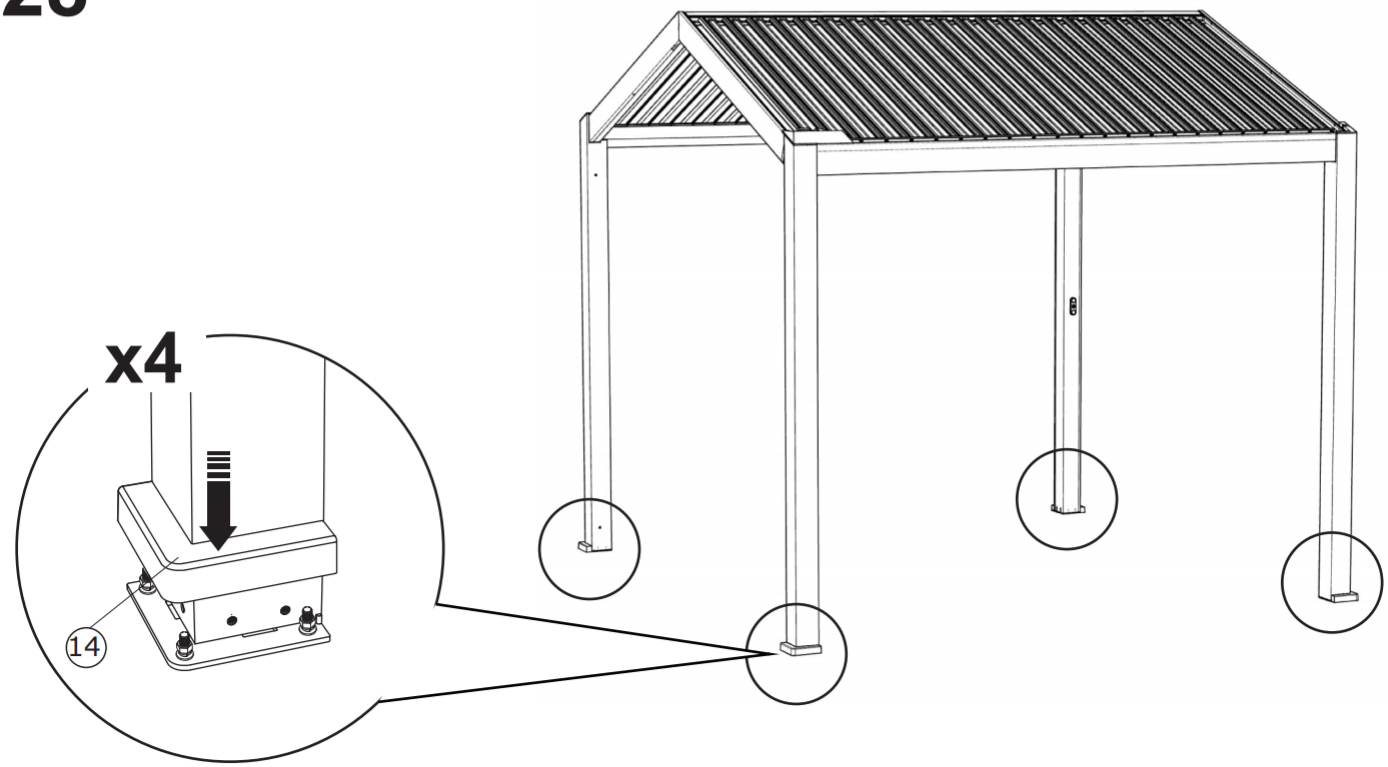


29

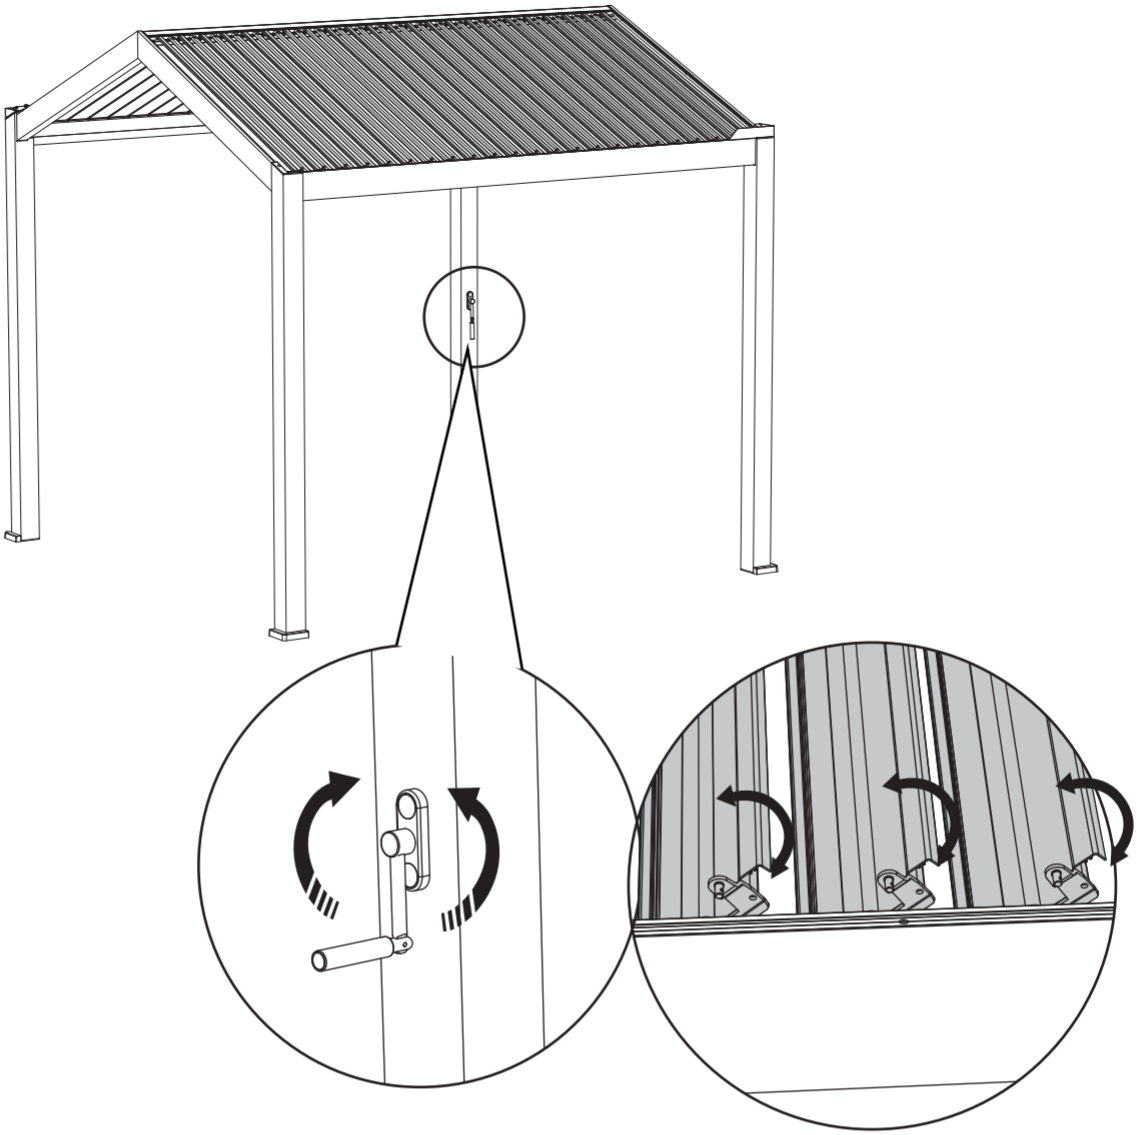



CARE AND CLEANING:

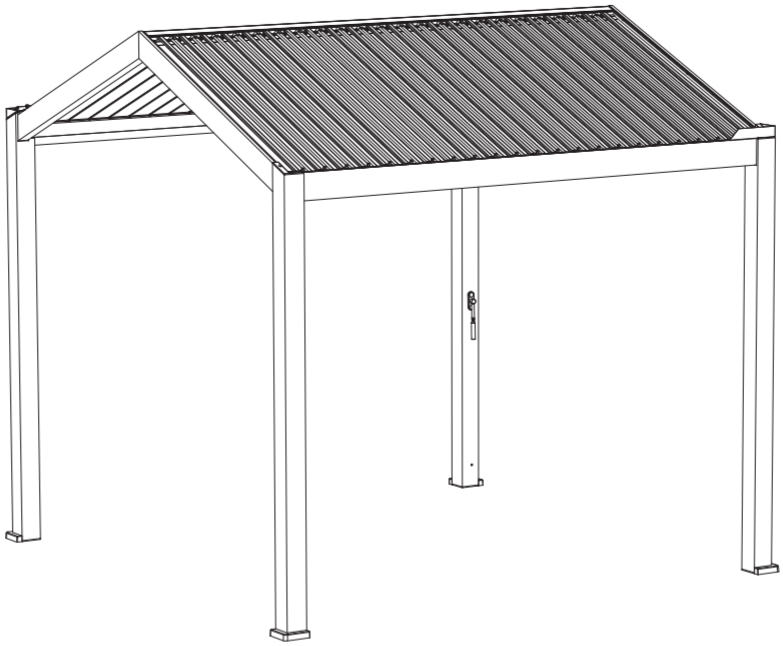

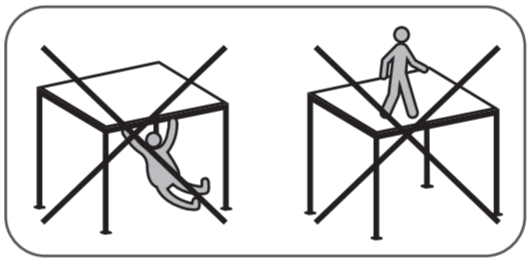



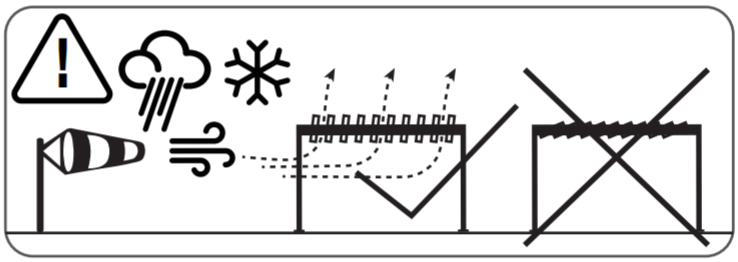

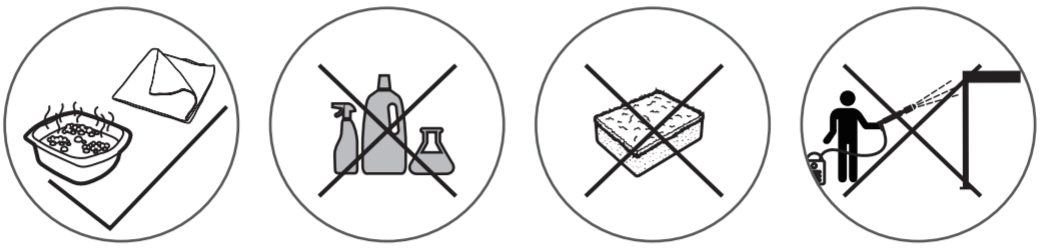

1. TO CLEAN,WIPE WITH DAMP CLOTH.DO NOT USE BLEACH,ACID SOLVENTS OR ABRASIVE CLEANERS OR FRAME PARTS.
2. DURING VARYING WEATHER CONDITIONS AND WINTER PERIOD,WE STRONGLY RECOMMEND THAT IT CAN BE STORED IN A DRY AREA WITH A SUITABLE COVER BEFORE STORAGE,PLS ENSURE IT IS CLEAN AND DRY.
3. IN THE EVENT OF BARE METAL SHOWING DUE TO SCRATCH,IT IS PREFERRED TO TREAT WITH A RUST REPELLING VARNISH OR SIMILAR.
4. PERIODICALLY CHECK AND ENSURE THAT ALL THE SCREWS ARE COMPLETELY TIGHTENED.
5. A MATCHING FURNITURE COVER IS STRONGLY RECOMMENDED TO EXTEND THE USAGE LIFE-SPAN.